INSTRUCTIONS FOR USE



Hybrid mattress system







WARNING

To avoid injury, always read this Instructions for use and accompanied documents before using the product.

Design Policy and Copyright

 $\ensuremath{\mathbb{R}}$ and $\ensuremath{^{\text{TM}}}$ are trademarks belonging to the Arjo group of companies.

© Arjo 2024.

As our policy is one of continuous improvement, we reserve the right to modify designs without prior notice. The content of this publication may not be copied either whole or in part without the consent of Arjo.

Contents

Foreword	. 5
Intended use	. 6
Safety instructions	. 8
Preparation	10
Parts designation Alternating pressure pump Control panel Standard and Plus mattress Plus Flex mattress with bolsters Stretcher (ST) mattress Seat cushion	11 11 12 13 14
Control panel. Run/Standby button and light . Lock button and light . Audio off light . Weight select buttons and lights . Audio alarm pause button and light . System fault light . Low pressure light . Skin IQ light .	16 16 16 17 17 17
Product description - Alternating pressure pump Repeater light Hanging brackets Power cable Day/Night mode Skin IQ port Audio on/off switch	18 18 18 18 18
Product description - Mattresses and seat cushion All mattress variants Standard and Plus mattress variants Plus Flex mattress with bolsters Seat cushion	19 19 20 20
Reactive and active therapy Reactive therapy Active therapy System start-up	21 21
Assemble the hybrid mattress system	22
Assemble the Plus Flex mattress with bolsters	

Dissassemble the hybrid mattress system	
Turn-off and disconnect the pump	
Disassemble the Plus Flex	
Store the pump	
Assemble the Stretcher (ST) mattress	
Assemble the Seat cushion	
Homecare use	
Cleaning and disinfection	
Care and preventive maintenance	
Troubleshooting and alarms	
Technical specifications	
Labels	43
Electromagnetic compatibility	

Foreword

Thank you for choosing the AtmosAir Velaris® hybrid mattress system.

Customer contact information

For questions regarding this product, supplies, maintenance, or other Arjo products and services, contact Arjo, an Arjo authorised representative or visit www.arjo.com.

Read and fully understand this IFU before using the product

The information in these Instructions For Use (IFU) is necessary for the proper operation and maintenance of your device. It will help to protect your product and make sure that it performs to your satisfaction. The information in this IFU is important for your safety. You must read and understand the IFU to help prevent possible injury. Unauthorised modifications on any Arjo device can affect its safety and performance. Arjo cannot be held responsible for any accidents or incidents resulting from such modifications to its products.


Service and support

Routine maintenance before every use or every week (in long-term care) is necessary to maintain the safety and reliability of the product. See the Care and preventive maintenance section for more information. If you require further information or spare parts, see Customer contact information.

Serious incident

If a serious incident occurs in relation to this medical device, affecting the user, or the patient, then the user or patient should report the serious incident to the medical device manufacturer or the distributor. In the European Union, the user should also report the serious incident to the Competent Authority in the member state where they are located.

Definitions in this IFU

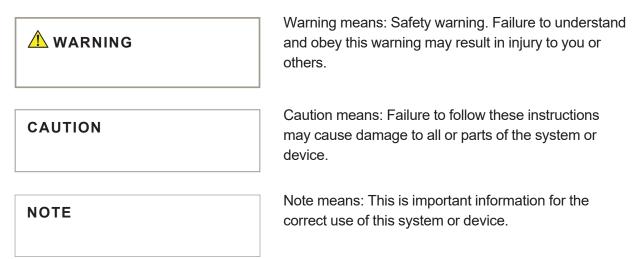

Intended use

The AtmosAir Velaris hybrid mattress system is intended for use by caregivers¹ in acute care, long-term care and home care facilities, including private homes.

The hybrid mattress system is indicated for the prevention and management of pressure injuries. It should be used as part of an individualised, comprehensive pressure injury protocol. This typically includes: repositioning, nutritional support and skin care. The surface should be selected based on full assessment of the patient needs.

The hybrid mattress system represents one aspect of a pressure injury management protocol. All other aspects of care should be considered by the healthcare professional. If existing wounds do not improve, or the patient's condition changes the overall therapy regimen should be reviewed by the healthcare professional.

As guidance the system when used in a non-powered reactive mode is indicated for patients that are deemed to be 'At Risk' of a pressure injury. If the system is used in conjunction with the pump, the patients with a 'higher risk profile' may be considered.²

The Velaris Standard mattress, Plus and Plus Flex can all be used in conjunction with the Velaris pump in order to step up therapy from reactive to active.

The Velaris Stretcher and Seat cushion are reactive only and cannot be used in conjunction with the Velaris pump.

The above are guidelines only and should not replace clinical judgement.

The Standard mattress system is for patients within the weight range of 40 kg (90 lb) to 250 kg (550 lb). Heavier patients weighing up to 454 kg (1000 lb) should use the Plus or Plus Flex (bariatric) mattress system.

The hybrid mattress system should only be used for the purpose specified in this Instructions for use. Any other use is prohibited.

Caregiver may be a healthcare professional or lay person who operates this medical device.
 European Pressure Ulcer Advisory Panel, National Pressure Injury Advisory Panel and Pan Pacific Pressure Injury Alliance. Prevention and Treatment of Pressure Ulcers/Injuries:

Clinical Practice Guideline. The International Guideline. Emily Haesler (Ed).

EPUAP/NPIAP/PPPIA: 2019, Chapter 4 Risk Factors and Risk Assessment

Contraindications

In powered active alternating mode with the pump, do not use the hybrid mattress system with patients with an unstable cervical, thoracic and/or lumbar fracture, cervical traction, and skeletal traction. For any other conditions that may be complicated by a moving surface, do not use the hybrid mattress system.

In the non-powered reactive mode without the pump, - It may be possible to use the surface for patients with unstable cervical, thoracic and/or lumbar fracture, cervical traction, and skeletal traction if assessed by a healthcare professional as suitable to do so. Ongoing assessment and continuous monitoring of the patient is advised.

Patient assessment

Facilities should establish regular assessment routines. Caregivers should assess each patient before using the product. The patient weight must not exceed:

- 250 kg (550 lb) for the Standard mattress
- 454 kg (1000 lb) for the Plus (bariatric) mattress
- 454 kg (1000 lb) for the Plus Flex (bariatric) mattress (with removable bolsters)
- 250 kg (550 lb) for the Stretcher (ST) mattress
- 250 kg (550 lb) for the Seat cushion

If the patient does not meet these criteria an alternative medical device/system shall be used.

Expected service life

The expected service life of the AtmosAir Velaris system elements is:

- Mattress 5 Years
- Seat Cushion 5 Years
- Pump 7 Years

The expected service life of this equipment is subject to preventive maintenance being carried out in accordance with the instructions for care and maintenance found in this Instructions for use.

Safety instructions

WARNING

To avoid risks of tripping or strangulation, always use the cable management for the power cable.

🗥 warning

To avoid injury, keep the mains power socket and plug accessible at all times. To safely cut off the pump's power supply, remove the plug from the mains outlet.

WARNING

To avoid pressure injury, make sure that the hybrid mattress system is assembled correctly.

WARNING

To avoid bodily injury, do not use the mattress or ST mattress as a patient movement device.

WARNING

To avoid injury and/or unsafe product, do not use unapproved accessories or attempt to modify, disassemble or otherwise misuse the hybrid mattress system.



Do not attempt to service or maintain the pump while it is in use.



🗥 warning

To avoid falls and injury, make sure that cables and the tube-set are positioned correctly. Keep cables away from moving bed parts or other possible entrapment areas.

	<u>î</u>

To avoid pressure injury the patient must not wear clothing that may cause areas of localized high pressure due to creases, seams, etc. Objects in pockets must be avoided for the same reason.

To avoid reduced benefits from the mattress, do not place extra layers between the patient and the mattress.

CAUTION

To avoid damage to the device, do not use sharp objects or electrical heat under the blankets on or under the hybrid mattress system.

CAUTION

To avoid damage, do not expose the device to naked flames, such as cigarettes. This is especially important for the mattress. A leak in the mattress (Standard and Plus) may propagate the fire.

CPR

CPR can be initiated immediately according to local protocols (level the bed, disconnect the pump, lower the side rails).

Preparation

Bed frame recommendation

The mattress range is designed to be used on Arjo bed frames. See Technical specifications on page 39 of this IFU. The Standard and Stretcher (ST) mattresses may also be used with other bed frames or trolleys (non-Arjo).

The Plus mattress and Plus Flex mattress with bolsters may only be used with the Arjo Citadel Plus bed frame.

The clinician or caregiver should assess the needs and determine which mattress and bed frame to use. See the bed frame IFU for compatible mattress sizes. Find the dimensions of all mattresses in section Measurements and compatibility on page 40.

Actions before first use

- 1. Visually check the package for damage. If the package is damaged, contact the transport agency. Do NOT use the product.
- 2. Read this IFU.
- 3. Check that all parts of the product are supplied: Compare to section Parts designation on page 11. If any part is missing or damaged do NOT use the product.
- 4. Recycle the packaging according to local regulations.
- 5. Choose a designated area where this Instructions for Use should be kept and is easily accessible at all times.

Actions before every use


Inspect the hybrid mattress system according to section Care and preventive maintenance on page 36. If any item is damaged - do NOT use the product.

Action after each patient

Clean and disinfect the product after each patient according to section Cleaning and disinfection on page 32.


Parts designation

Alternating pressure pump

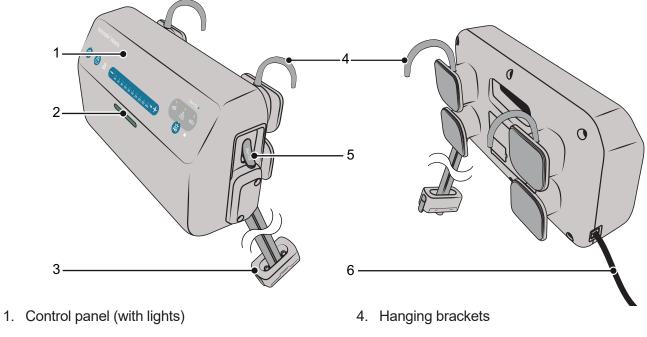

- 2. Repeater light
- 3. Tube-set connector
- **Control panel**


- 5. Skin IQ port
- 6. Power cable

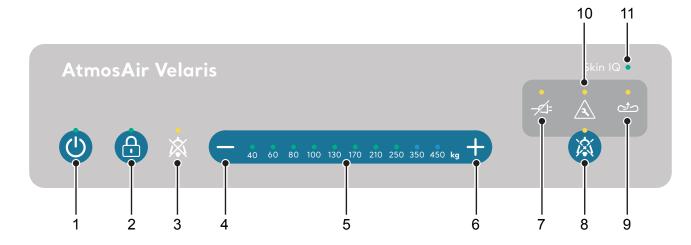

- 1. Run/Standby button and light
- 2. Lock button and light
- 3. Audio OFF light
- 4. Weight decrease button (-)
- 5. Weight selected light
- 6. Weight increase button (+)

- 7. Power fail light
- 8. Audio alarm pause button and light
- 9. Low pressure light
- 10. System fault light
- 11. Skin IQ connected light


Standard and Plus mattress

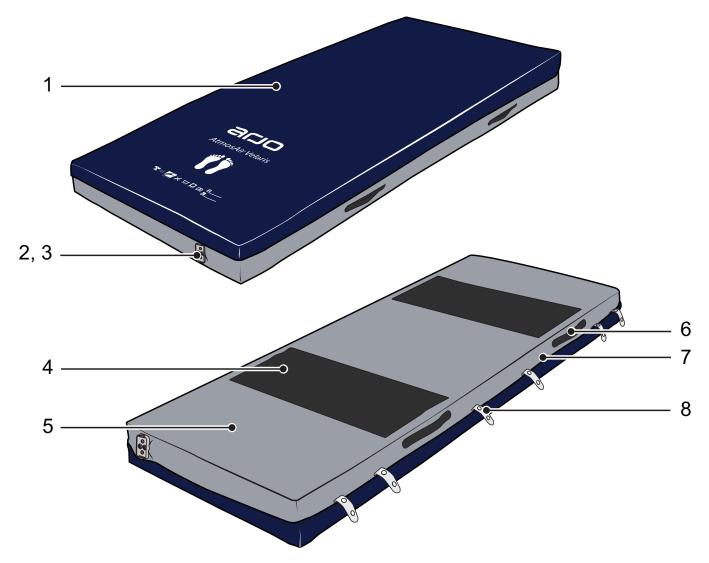

- 1. Detachable top cover
- 2. Mattress connector
- 3. Mattress connector cavity
- 4. Non-Slip strips

- 5. Detachable bottom cover
- 6. Handles
- 7. Cover attachment zip with zip flap
- 8. Cable management loops


Plus Flex mattress with bolsters

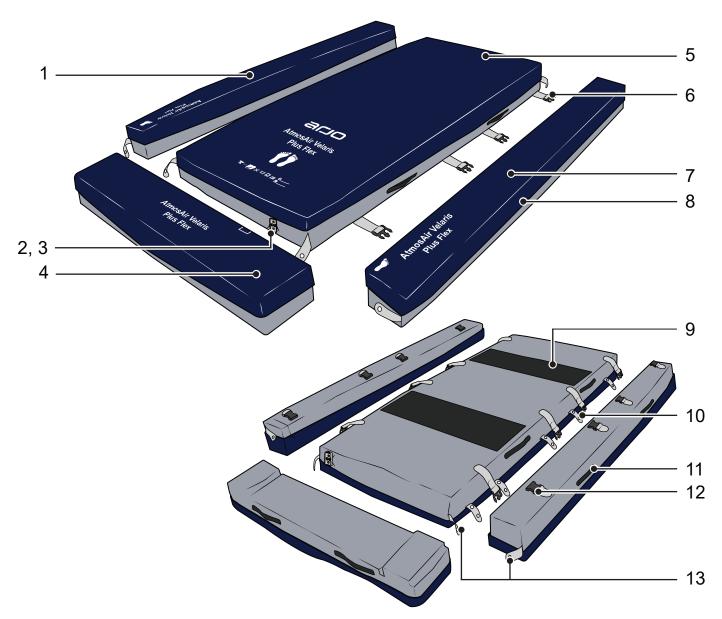

- 1. Left side bolster
- 2. Mattress connector
- 3. Mattress connector cavity
- 4. Foot bolster
- 5. Mattress
- 6. Buckles (four on each side)
- 7. Right side bolster
- 8. Cover attachment zip with zip flap

- 9. Non-Slip strips
- 10. Cable management loops
- 11. Handles (two on each bolster)
- 12. Buckles (four on each bolster)
- 13. Side bolster retaining straps (two at the head end, two at the foot end)


Stretcher (ST) mattress

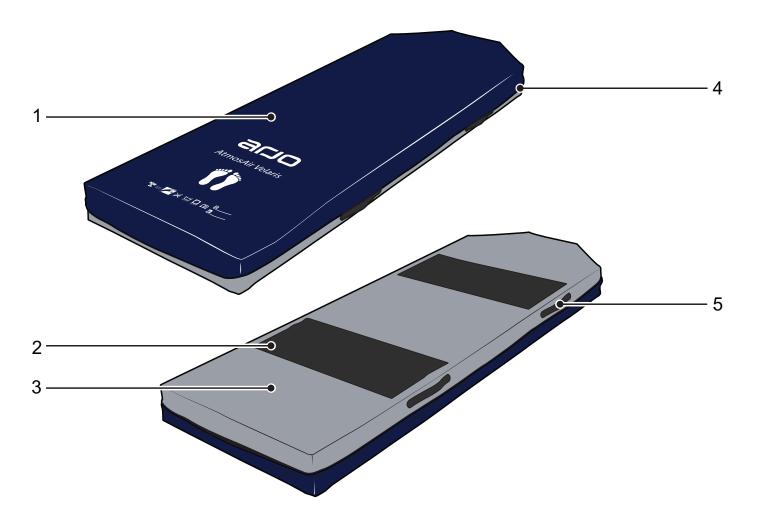

- 1. Detachable top cover
- 2. Non-Slip strips
- 3. Detachable bottom cover

- 4. Cover attachment zip with zip flap
- 5. Handles

Seat cushion

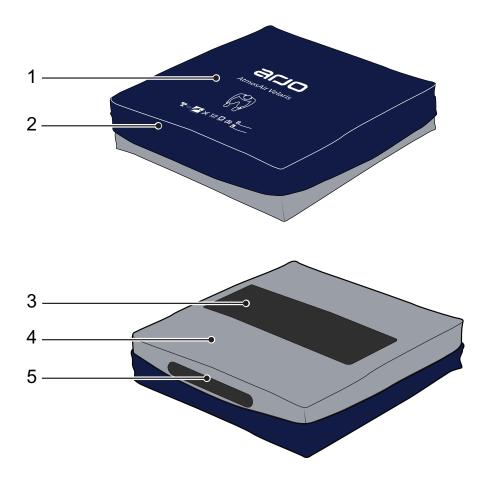

- 1. Detachable top cover
- 2. Cover attachment zip with zip flap
- 3. Non-Slip strip

- 4. Detachable bottom cover
- 5. Handle (on the back)

Control panel

Run/Standby button and light



The Run/Standby button switches the pump between Run mode and Standby mode.

In Run mode the light is on.

For Standby mode, press and hold the button for two seconds. The light turns off.

Lock button and light



To lock the control panel, press and hold the Lock button for two seconds. When locked the light turns on.

To unlock all control panel buttons, press and hold the Lock button for two seconds. When unlocked the light turns off.

The control panel buttons automatically lock after 60 seconds if no control panel button is pressed.

Audio off light



The Audio off light turns on when the Audio notifications and alarms have been permanently disabled.

See Audio on/off switch on page 18

Weight select buttons and lights



The default weight is set and the light is on at 100 kg (220 lb).

- Press the button to reduce the patient weight. Minimum value is 40 kg (90 lb).
- Press the + button to increase the patient weight. Maximum value is 450 kg (1000 lb).

For each button press the weight reduces/ increases by one step.

The selected weight is indicated by a green light.

The Plus mattress weight settings (350 kg and 450 kg) are indicated by a blue light when selected.

Always round up the patient's weight to the next higher value.

Audio alarm pause button and light



Press the Audio alarm pause button to silence the audible alarm for 15 minutes. The light turns on.

Press the button again to cancel the alarm pause.

Power fail light



If a power failure is detected the power failure light turns on and an alarm sounds.

Active (alternating) therapy is not possible during power failure conditions.

NOTE

To turn the pump off and cancel the alarm during a power outage, press and hold the run/standby button for two seconds.

System fault light



If an internal fault of the pump is detected during Built-In Self-Test (BIST) or during therapy, the system fault light turns on and an alarm sounds

Low pressure light



If the mattress fails to achieve the target pressure, the low pressure light turns on and an alarm sounds.


Skin IQ light



The Skin-IQ light turns on when a Skin-IQ coverlet is connected to the Skin IQ power outlet port.


Product description - Alternating pressure pump

Repeater light

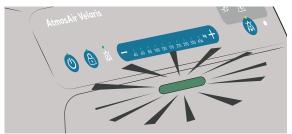

During normal operation the repeater light is on and green. During a fault condition, the repeater light will turn yellow.

Hanging brackets

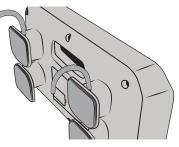

Use the hanging brackets to mount the pump at the foot end of the bed.

The pump can also be placed on a flat surface near the bed and the mattress connector.

Power cable



Position the power cable in the cable management loops on the left side of the mattress. See Cable management loops on page 19.

Day/Night mode

A light sensor automatically reduces the brightness of the pump lights in low ambient light.


Skin IQ port



Only use the Skin IQ port with the Skin IQ power cable to provide power to the Skin IQ coverlet. See Allowed combinations on page 40.

For instructions on how to use Skin IQ, see the Skin IQ IFU.

Audio on/off switch

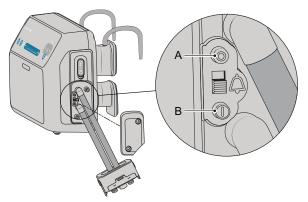

The Audio on/off switch disables all pump sound notifications. Use it when it has been determined that audio output could be disturbing for the patient.

The Audio on/off switch is located underneath the side panel cover. The cover can only be removed by a service technician.

Set the switch to position A to disable all audio output. Set the switch to position B to enable all audio output.

NOTE

The Audio on/off switch should only be used by qualified personnel under direction of the responsible organisation.


Product description - Mattresses and seat cushion

All mattress variants

Handles


To avoid bodily injury, never use the mattress or ST mattress as a patient movement device.

To move the mattress use the four handles on the bottom mattress cover.

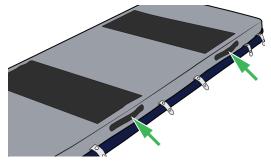

Non-slip base

Non-slip strips integrated in the bottom cover prevent the mattress from slipping on the bed frame.

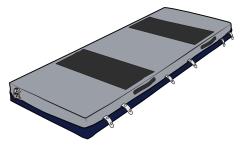


Standard and Plus mattress variants

Covers

The mattress top and bottom welded covers are co-joined by a zip.

Cable management loops

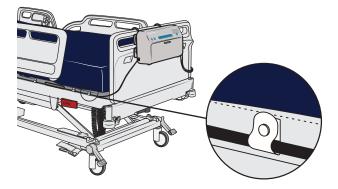

The cable management loops are used to secure the pump power cable to avoid falling or entanglement.

Mattress connector



The mattress connector is used to connect the mattress to the pump. The mattress connector is located at the foot end of the mattress.

Plus Flex mattress with bolsters

Covers

 
The Plus Flex mattress and bolster bottom covers are sewn, the top covers are welded and co-joined by a zip.

Handles

To move the mattress use the four handles on the bottom mattress cover.


To move a bolster use the two handles on the bottom bolster cover.

Buckles



The buckles are used to connect the side bolsters to the mattress. There are four buckles on each side of the mattress and corresponding buckles on the side bolsters.


Side bolster retaining straps

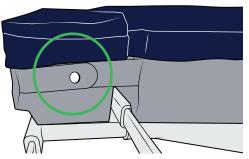

The side bolster retaining straps are used to connect the side bolsters to the mattress.


Seat cushion

Handle

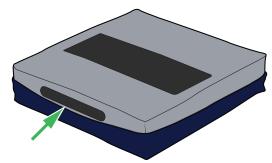

To move the seat cushion use the handle on the back.

Non-slip base

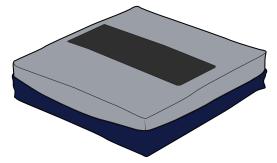

The non-slip strip integrated in the bottom cover prevents the cushion from slipping on the chair.

Reactive and active therapy

Reactive therapy



For reactive therapy, do not connect the pump. If the mattress is connected to the pump, disconnect the pump tube-set connector.

Make sure that the mattress is correctly installed on the bed / trolley frame before delivery of reactive therapy. See Assemble the hybrid mattress system on page 22.

Patient position

Place the patient on the mattress. Make sure that the patient's head is placed on the head end of the mattress.

Active therapy



For active (alternating) therapy, assemble the mattress with an AtmosAir Velaris pump. Active therapy is used with the Standard or Plus mattress variants.


Before starting active therapy, make sure that the hybrid mattress system is assembled correctly with the alternating pressure pump attached. See Assemble the hybrid mattress system on page 22.

Patient position

Place the patient on the mattress. Make sure that the patient's head is placed on the head end of the mattress.

Caregiver position

The caregiver should be positioned in front of the pump during active therapy.

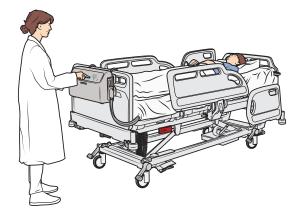

System start-up

- Connect the pump power cable to a power source. The pump makes a startup tone and runs a self-diagnostic check for about 10 seconds.
- When the check is completed, the pump immediately starts to deliver active (alternating) therapy with a default weight setting of 100 kg (220 lb).
- Press the or + buttons to select the weight. Always round the patient's weight up to the next higher value.

Assemble the hybrid mattress system

For active therapy, assemble the mattress with an AtmosAir Velaris pump.

For reactive therapy, do not connect the pump. If the mattress is connected to the pump, disconnect the pump tube-set connector.

Assemble the Standard and Plus mattress

- 1. Remove any existing mattress from the bed frame.
- 2. Check that there are no protruding sharp objects on the frame surface.
- 3.

To avoid death or serious injury by entrapment, always select the correct mattress size for the bed.

Select the correct mattress size for the bed frame. Make sure that there are no gaps to trap the patient's head or body.


For mattress sizes, see section Measurements and compatibility on page 40.

4. Position the mattress on the bed frame. Make sure that the mattress is orientated correctly with the mattress connector at the foot end of the bed frame.



Assemble the pump

- 1. Unwrap the power cable and tube-set from the pump cable management.
- 2. Hang the pump at the foot end of the bed.

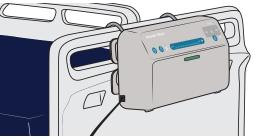


Make sure that the pump is not:

- near a heat source
- in the sun
- covered up
- 3. Check that the tube-set connector is not twisted.
- 4.


To avoid risks of tripping or strangulation, always use the cable management for the power cable.

Place the power cable in the cable management loops on the left side of the bottom mattress cover. If the Plus Flex foot bolster will be used, leave slack in cable at the foot end of the bed.

5. Secure the cable using the six cable loops with locking clips.

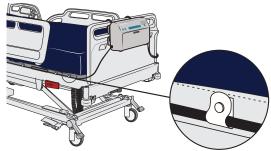

- 6. Fold down the zip flap over the power cable and cable management loops.
- 7. Pull the mattress connector slightly out of its cavity.

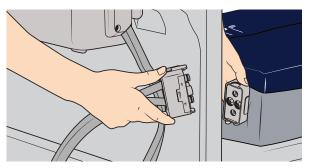

8. Press the connectors together. Make sure that the pump tube-set connector clicks into place on both sides (double-click).



9. Push the mattress connector back into the mattress cavity and reposition the zip flap.



10. See System start-up on page 21.

Assemble the Plus Flex mattress with bolsters

Only use the Plus Flex mattress and bolsters with a Citadel Plus bed frame.


1. Place the Plus Flex mattress central on the bed frame. For active therapy, follow step 1-6 in Assemble the pump on page 22.

2.

To avoid risk of falling or entrapment, make sure there is a caregiver present on the open side of the bed frame, when assembling or removing the bolsters.

Extend the width of the left side of the Citadel Plus bed frame fully, for instructions see Citadel Plus IFU.

3. Make sure all mattress buckles, four on each side, are placed on top of the extended bed frame.

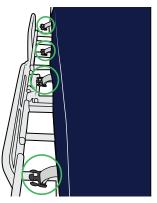


4. Place the left side bolster on the edge of the mattress, make sure that the foot print is located at the foot end and that the handles are turned upwards.




- 5. Align the buckles on the side bolster with the buckles on the mattress.
- 6. Attach the four buckles.



 Fold down the side bolster onto the bed frame. Make sure the side bolster is firmly fitted in the extension and at level with the mattress. 8. Attach the side bolsters to the mattress, using the locking clips on the retaining straps. There are two at the foot end and two at the head end.

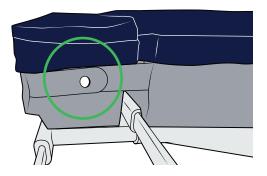


- 9. Repeat steps 2-7 for the right side bolster.
- 10. Extend the length of the Citadel Plus bed frame fully.
- 11. Pull the tube-set connector on the pump through the foot end gap on the right side of the bed frame.

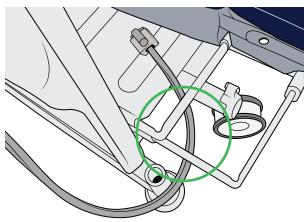

12. Pull the mattress connector slightly out of its cavity.

13. Press the connectors together. Make sure that the pump tube-set connector clicks into place on both sides (double-click).

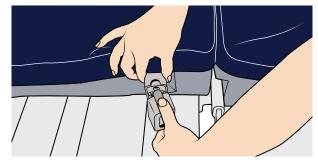

- 14. Push the mattress connector back into the mattress cavity.
- 15. Place the foot bolster at the foot end of the mattress.




16. Fold down the foot bolster onto the bed frame. Make sure that the connectors are aligned with the square marking on the top cover of the foot bolster.



17. Reposition the zip flap.


Instructions continue on the next page

18. Lift up the foot bolster and place the power cable in the left cavity.

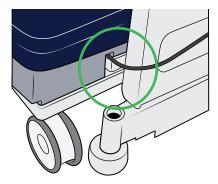

19. For all bolsters, make sure:

- The bolsters are the same height as the mattress.
- The print on the top cover is visible.
- All handles on the bolsters are on the outside.
- All buckles are securely attached to the mattress.
- All locking clips are attached, on both the head and foot end of the mattress.
- All zip flaps are folded down, covering the zips.

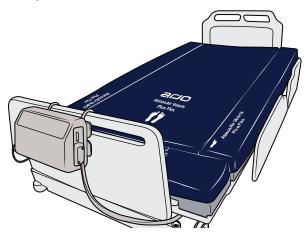

20.

To avoid risk of falling or entrapment, make sure that the patient is placed at the centre of the mattress.

Place the patient at the centre of the mattress.

- 21. Make sure all side rails are up.
- 22. For active therapy, see System start-up on page 21.

Transport mode

To avoid risk of falling or entrapment, make sure there is a caregiver present on the open side of the bed frame, when assembling or removing the bolsters.

The side bolsters and/or the foot bolster might need to be removed and reassembled during transport, for example to fit in an elevator.

Make sure there is a caregiver present at the open side of the bed at all times and make sure that the patient's arms and feet are clear of the bolsters.

Never leave extended sides open. Retract the foot end or the side of the bed frame once each bolster has been removed.

Patient leaving bed

To avoid risk of falling when a patient is leaving the bed, make sure there is a caregiver present on the open side of the bed frame.

When the patient needs to leave the bed, make sure there is a caregiver present at the open side at all times.

Dissassemble the hybrid mattress system

Turn-off and disconnect the pump


- To stop therapy, press and hold the Lock button for 2 seconds then press and hold the Run/Standby button for 2 seconds.
- 2. Unplug the power cable from the power source.
- 3. For Plus Flex: lift out the foot bolster.

 
CAUTION


4.

Allow the mattress air cells to equalize to atmosphere before disconnecting pump tube-set connector.

Locate the connector inside the connector cavity, near the foot end of the mattress.

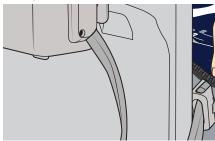



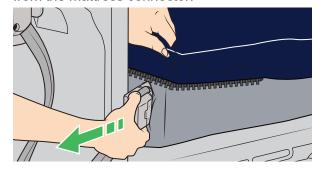

6. Push the mattress connector back into the connector cavity.



ΝΟΤΕ

The mattress can continue to be used, as a reactive surface on the bed frame until active (alternating) therapy is needed, and the pump is reconnected

Disassemble the Plus Flex

Do not leave extended sides open. For instructions on how to retract the bed frame, see Citadel Plus IFU.

- 1. Lift out the foot bolster.
- 2. If applicable, disconnect the pump tube-set connector.
- 3. Retract the foot end of the bed frame.
- 4. Detach the retaining straps on the left side bolster.
- 5. Lift up the left side bolster onto the mattress.
- 6. Detach the four buckles.
- 7. If applicable, detach the cable from the cable management loops.
- 8. Retract the left side of the bed frame.
- 9. Detach the retaining straps on the right side bolster.
- 10. Lift up the right side bolster onto the mattress.
- 11. Detach the four buckles.
- 12. Retract the right side of the bed frame.


Instructions continue on the next page

Store the pump

- 1. Clean and disinfect the pump. See section Cleaning and disinfection on page 32
- 2. Wrap the pump tube-set around the hanging brackets anticlockwise.



3. Wrap the power cable around the hanging brackets clockwise.

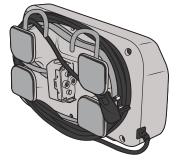

4. Store the pump in a designated area. For the storage requirements, see Transport and storage on page 39.

Assemble the Stretcher (ST) mattress


- 1. Remove any existing mattress from the trolley frame.
- 2. Check that there are no protruding sharp objects on the frame surface.
- 3.

To avoid death or serious injury by entrapment, always select the correct mattress size for the trolley.

Select the correct mattress size for the trolley frame. Make sure that there are no gaps to trap the patient's head or body.

For mattress sizes, see section Measurements and compatibility on page 40.

4. Position the mattress on the trolley frame. Make sure that the mattress is orientated correctly with the cut corners at the head end.

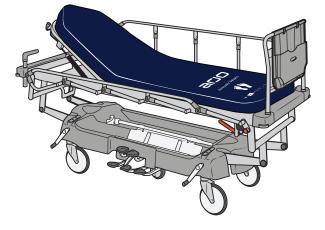

Assemble the Seat cushion

CAUTION

To avoid inadequate pressure redistribution, always use the seat cushion in the correct orientation.

CAUTION

To avoid puncturing the seat cushion, check that there are no sharp objects on the chair.

Place the seat cushion on top of the chair seat. Position the cushion with the symbol located at the front of the chair and the carrying handle at the back.



Homecare use

To avoid injury to the patient when operating the hybrid mattress system as a caregiver and as a lay person:

- Make sure that the device is operating according to section Reactive and active therapy on page 21.
- If the device is not operating correctly, see section Troubleshooting and alarms on page 38.
- If the device is still not operating correctly, or if you have concerns, contact the patient's doctor or nursing staff for advice.

🔼 WARNING

To avoid risk of entanglement, never leave children or vulnerable persons unattended with the device

WARNING

To avoid injury to the patient, keep children and pets away from the device.

To avoid suffocation, keep the bags supplied with this device away from babies and small children.



To avoid choking, never leave children unattended near the device. The device includes small parts that may present a choking hazard to small children, vulnerable persons and pets if inhaled or swallowed.

CAUTION

To avoid damage to the device, pets and children must be supervised in the vicinity of the hybrid mattress system.

Before using the AtmosAir Velaris hybrid mattress system in a home environment, make sure that all caregivers, including relatives, have read and understood the instructions in this IFU.

When the hybrid mattress system is in use, make sure that:

- It is kept away from sources of heat and moisture, and protected from dust, lint and dirt.
- The pump is not covered.
- The operational environment meets the requirements. See section Operating conditions on page 39.

When the hybrid mattress system is not in use, make sure that:

- No children can access it.
- No pets can come into contact with it.
- The storage environment meets the requirements. See section Transport and storage on page 39.

Cleaning and disinfection

The hybrid mattress system should be cleaned and disinfected at regular intervals and between patients. Follow your local practices for all reusable medical devices.

Contact Arjo Customer Service for any questions regarding the cleaning and disinfection of the device. Make sure that the Safety Data Sheet (SDS) is available for the disinfectant used.



To avoid eye and skin damage, always use protective glasses and protective gloves. If contact occurs, rinse with plenty of water. If eyes or skin become irritated, contact a physician.

Always read the material safety data sheet of the disinfectant.

To avoid eye and skin damage, always use protective glasses and protective gloves. If contact occurs, rinse with plenty of water. If eyes or skin become irritated, contact a physician.

Always read the material safety data sheet of the disinfectant.



To avoid electrical shock, always disconnect the pump from the power source before cleaning and inspecting.

To prevent cross-contamination, always follow the disinfection instructions in this IFU.

\Lambda warning

To avoid eye or skin irritation, never disinfect in the presence of a patient.

CAUTION

To avoid equipment damage:

- Do not use Phenol-based solutions or abrasive compounds or pads during the disinfection process as these damage the surface coating.
- Do not spray cleaning solutions directly onto the pump.
- Do not autoclave or boil any part of the hybrid mattress system. Avoid immersing electrical parts in water.

Allowed disinfectants

DISINFECTANT	HYBRID MATTRESS SYSTEM	TOP COVER	BOTTOM COVER	RECOMMENDATIONS FOR USE
Alcohol solution ≤ 70%	•	•	•	Coating may swell when wet hence care must be taken to avoid accidental scratches and fold only when dry before storage.
Chlorine solution $\leq 1\%$ (10,000 ppm) ¹	•	•	•	Acceptable use at pH 7-9. Must be towel dried (avoid harsh abrasion) after rinsing with clean water.
Quaternary ammonium solution 1920ppm	•	•	•	Acceptable for use at pH 7-10 only. Always check the label first. DO NOT USE WIPES containing Sodium Hydroxide (NaOH). Fully rinse with clean water to remove residual chemicals
Quaternary ammonium solution, 3-15%		•	•	Acceptable for use at pH 7-10 only. Always check the label first. DO NOT USE WIPES containing Sodium Hydroxide (NaOH). Fully rinse with clean water to remove residual chemicals.
Hydrogen peroxide solution, 3-10%.		•		Acceptable for use at pH 5-9 only. Low and high pH's will DAMAGE the coating. Fully rinse with water to remove any acid or alkali.

¹ Chlorine concentrations may vary from 250 ppm to 10,000 ppm depending on local policy and contamination status.

NOTE

Rinse and dry thoroughly with clean water to remove residual chemicals after disinfecting with each chemical before storage

Accessories needed for cleaning/ disinfection

- Protective glasses
- Protective gloves
- Spray bottle with cleaning solution
- Spray bottle with disinfectant solution
- Spray bottle with water
- Cloths

Clean and disinfect

(26 steps)

Always follow these steps for proper cleaning and disinfection after each patient.

Prepare the pump

- 1. Disconnect the pump from the mattress.
- 2. Select Standby on the pump unit. Disconnect the pump from the power source.

Clean the pump

- 3. Put on protective glasses and gloves.
- 4. Spray the cleaning solution on a clean cloth.
- 5. Wipe all areas of the pump to remove any deposits or visible dirt.
- 6. Clean all areas with residual dirt with the cloth as needed.
- 7. Use a new cloth soaked in water to wipe off all traces of cleaning solution.
- 8. Use a dry cloth to remove any excess moisture from the pump.

Disinfect the pump

- 9. Spray disinfectant solution on a clean cloth and wipe all areas of the pump.
- 10. Allow time for disinfection according to the instructions provided by the disinfectant manufacturer.
- 11. Use a new cloth soaked in water to wipe off all traces of disinfectant solution from the pump.
- 12. Use a dry cloth to remove any excess moisture from the pump.
- 13. Allow the pump to air dry.

Clean the mattress / bolster / seat cushion covers

NOTE

The top cover should be assessed for the level of soiling. If this soiling is deemed excessive, the top cover should be washed. The bottom cover should always be cleaned and disinfected by wiping.

- 14. Spray cleaning solution on a clean cloth and wipe all external areas and handles of the mattress / seat cushion top and bottom covers. Make sure to wipe the mattress connector and the connector cavity thoroughly. Wipe off any dirt with a clean cloth.
- 15. Clean areas with residual dirt (e.g. handles) with the cleaning solution as needed.
- 16. Use a new cloth soaked in water to wipe off all traces of cleaning solution
- 17. Use a dry cloth to remove any excess moisture.

Disinfect the mattress / bolster / seat cushion covers

- 18. Spray disinfectant solution on a clean cloth and wipe all external areas and handles of the mattress / seat cushion top and bottom covers. Make sure to wipe the mattress connector and the connector cavity thoroughly.
- 19. Allow time for disinfection according to the instructions provided by the disinfectant manufacturer.
- 20. Use a new cloth soaked in water to wipe off all traces of disinfectant solution from the mattress / seat cushion.
- 21. Use a dry cloth to remove any excess moisture.
- 22. Allow the mattress / seat cushion top and bottom covers to air dry.

Wash the mattress / bolster / seat cushion top cover

- 23. Unzip and remove the top cover from the mattress / seat cushion.
- 24. Launder the top cover at a maximum temperature of 80°C (176°F) with detergent.
- 25. After washing, allow the top cover to air dry (preferred) or tumble dry at 40°C (104°F) or up to 80°C (176°F) maximum.
- 26. Once dry refit the top cover to the mattress / seat cushion.

Care and preventive maintenance

Under normal use the hybrid mattress system is subject to wear and tear. Perform the following actions when specified to make sure that the product remains within its original manufacturing specifications.

To avoid malfunction resulting in injury, inspection your device regularly. Always follow the recommended maintenance schedule.

\rm MARNING

To avoid injury and/or an unsafe product, the pump's case must only be removed by qualified service personnel. There are no user-serviceable parts inside the pump, mattress or seat cushion. No modification of this device is allowed.

To avoid injury and/or an unsafe product, the device must be properly serviced at the correct frequency. All qualified service personnel must have documented training in the maintenance of this device and use the correct tools, parts and know-how.

CAREGIVER OBLIGATION	BEFORE EVERY USE OR EVERY WEEK	AFTER EACH PATIENT
Perform a full functionality test on the hybrid mattress system	•	
Visually check the control panel	•	
Visually check all electrical connections and power cable	•	
Visually check the mattress connector	•	
Visually check the pump tube-set and connector	•	
Visually check the top and bottom covers	•	
Clean and disinfect		•
Visually check all labels		•
Visually check all zips		•

Caregiver obligations - before every use or every week

NOTE

If any part is damaged or missing, DO NOT use the product.

Perform a full functionality test on the hybrid mattress system

- 1. Connect the pump tube-set to the Standard or Plus mattress. Make sure that the tube-set clicks into place.
- Connect the pump power cable to a power source. The pump makes a startup tone and runs a self-diagnostic check for about 10 seconds.
- When the check is completed, the pump Run/ Standby and front panel repeater lights turn on. The hybrid mattress system starts delivering active (alternating) therapy with a default weight setting of 100kg (220 lb).
- 4. If the functionality test fails, contact qualified service personnel

Visually check the control panel

- Check that the control panel is firmly affixed.
- Check that the control panel is undamaged.
- Check that the control panel is legible.

Visually check all electrical connections and power cable

- Check all electrical connections for signs of excessive wear or damage.
- Check the power cable for signs of excessive wear or damage.

Visually check the mattress connector

• Check the connector for signs of excessive wear or damage.

Visually check the pump tube-set and connector

- Check the tube-set for signs of excessive wear or damage.
- Check the connector for signs of excessive wear or damage.

Visually check the top and bottom covers

- Remove the top cover and check for signs of wear, tears or strike-through (stained firesock).
- Inspect the bottom cover for signs of wear and tears

Caregiver obligations - after each patient

Clean and disinfect

The hybrid mattress system has to be cleaned and disinfected. For further instructions, see section Cleaning and disinfection on page 32.

Visually check all labels

Check that all labels are attached on the hybrid mattress system according to section Labels on page 43. If any label is missing, contact Arjo Customer Service.

Visually check all zips

- Check that all zips are undamaged and not loose.
- Check that the zip puller is not missing.

Troubleshooting and alarms

The LOW PRESSURE and HARDWARE FAIL alarms are low priority alarms. The POWER FAIL light is an information signal.

LIGHT	POSSIBLE CAUSE	SOLUTION	ALARM ACTIVATION DELAY
LOW PRESSURE	 The mattress to pump connector is not correctly connected. There is a leak in the pneumatic system 	 Check that the tube-set connector is correctly connected to the pump - an audible click should be heard. Contact qualified service personnel. 	Maximum 25 minutes for mattress
POWER FAIL	 Power source removed, switched off or disconnected Power outage 	 Switch power source back on or reconnect. Wait for power to be restored. Press and hold the run/standby button to cancel the alarm 	Immediate
HARDWARE FAIL Repeater light on	 On initial power up During Normal operation, after successful start-up. 	 Internal hardware fault, replace pump Select Standby, remove power source. Re-power and if pump fails BIST replace pump. 	10 Seconds after power-up At any time during normal operation
LOCK MODE	The pump has been put into Lock mode.	Press and hold the Lock button for more than 2 seconds. The Lock button light is off and all buttons are unlocked	
AUDIO ALARM PAUSE	The pump audio alarm has been paused during LOW PRESSURE OR HARDWARE FAIL condition.	If the fault condition clears, the audio alarm pause is reset and the light is off. After 15 minutes, the audio alarm pause will reset and the light is off. If the fault condition persists, the audio alarm sounds again.	Max 15 minutes
	During a fault condition, if there is no audio alarm and the AUDIO OFF light is lit. The audio on/off switch is set to off position.	If it is required for Audio alarms and notifications to be activated a qualified technician can set the Audio on/off switch to ON.	
skin iQ Skin IQ ●	The Skin IQ is connected but blower is not operational.	Replace Skin IQ coverlet. Replace control PCBA.	

Technical specifications

GENERAL - PUMP	
Model:	AtmosAir Velaris
Case material:	PC ABS
Part number:	633xxx (xxx is determined by the type of mains lead fitted. Please refer to rear label for actual part number)
Size:	337 x 107 x 200 mm (13.3 x 4.2 x 7.9 in)
Weight:	4.1 kg (9 lb)
Plug Fuse Rating:	5A to BS1362 (UK only)
Degree of protection against electric shock:	Mains Connected: Class II, Double Insulated without Functional Earth
	Type BF
Degree of protection against liquid ingress:	IP22. Protected from touch by fingers and objects greater than 12 millimetres. Protected from water spray less than 15 degrees from vertical.
Mode of operation:	Continuous
Alternating Mode Cycle Time:	10 minutes

ELECTRICAL	
Supply voltage:	100-230 V
Supply frequency:	50-60 Hz
Power input:	3-46 VA

OPERATING CONDITIONS		
Temperature (Ambient):	5 °C to 40 °C (41 °F to 104 °F)	
Relative humidity range:	15 % to 90 % (non-condensing)	
Atmospheric pressure: 700 hPa to 1060 hPa		
If the pump is stored in conditions outside the operating ranges, allow time for its temperature to stabilise at		

room temperature before use. Allow a minimum of 8 hours if the pump is stored at -20 $^{\circ}$ C (-4 $^{\circ}$ F) or 60 $^{\circ}$ C (140 $^{\circ}$ F).

TRANSPORT AND STORAGE		
Short term (Up to 30 days):		
Temperature (Ambient)	-20 °C to 60 °C (-4 °F to 140 °F)	
Relative humidity range	0 % to 95 %	

TRANSPORT AND STORAGE

Long term (> 30 days):	
Temperature (Ambient)	0 °C to 40 °C (32 °F to 104 °F)
Relative humidity range	0 % to 95 % (non-condensing)

CAUTION

To avoid damage to the hybrid mattress system:

- Do not store in direct sunlight.
- Store the pump and mattress in the protective bags supplied.
- Clean and disinfect the pump and mattress before storage.

EXPECTED SERVICE LIFE

AtmosAir Velaris pump

7 years

END OF LI	FE DISPOSAL
Package	Corrugated cardboard, recyclable.
Product	• Fabric material used on the mattresses or any other textiles, polymers or plastic materials etc. should be sorted as combustible waste.
	Mattresses at the end of life should be disposed of as waste according to the national or local requirements, which may be landfill or combustion.
	 Pump units have electrical and electronic components and should be disassembled and recycled per waste of Electrical and Electronic Equipment (WEEE) or in accordance with local or national regulation.

ALLOWED COMBINATIONS	
AtmosAir Velaris Standard	Skin IQ® MCM, Coverlet Only
	Skin IQ® 365, Coverlet Only
AtmosAir Velaris Plus	Skin IQ® 1000, Coverlet Only
AtmosAir Velaris Plus Flex	Skin IQ® 1000, Coverlet Only

MEASUREMENTS AND COMPATIBILITY

Standard mattress				
Part no	Size mm (in)	Top cover material	Weight kg (lb)	Arjo bed frames
633048	810 X 2000 X 180	Reliant	15 (22)	
633049	(32 x 79 x 7)	Premium	15 (33)	
633020	860 x 1980 x 180	Reliant	15 5 (24)	Contoura 460/480, Minuet 2,
633026	(34 X 78 X 7)	Premium	15.5 (34)	Prioma
633021	880 x 2020 x 180	Reliant		Contoura C880, Enterprise
633027	(35 X 80 X 7)	Premium	15.5 (34)	5000, 8000, 9000, Citadel

MEASUD					
	EMENTS AND COM	-			
633022	880 x 2140 x 180	Reliant	16.5 (36)	Enterprise 5000, 8000, 9000	
633028	(35 x 84 x 7)	Premium		(Extended), Citadel (Extended)	
633023	900 x 2000 x 180	Reliant	16,5 (36)		
633029	(35 x 79 x 7)	Premium			
633900	1060 x 1980 x 180	Reliant	16,5 (36)		
633901	(42 x 78 x 7)	Premium	10,5 (50)		
633024	1070 x 2000 x 180	Reliant	17 5 (20)		
633030	(42 x 79 x 7)	Premium	- 17,5 (39)		
Plus mat	tress				
Part no	Size mm (in)	Top cover material	Weight kg (lb)	Arjo bed frames	
633025	1220 x 2140 x 180	Reliant	04 (52)		
633031	(48 x 84 x 7)	Premium	- 24 (53)	Citadel Plus	
Plus Flex mattress with bolsters					
Part no	Size mm (in)	Top cover material	Weight kg (lb)	Arjo bed frames	
633902	1220 x 2240 x 180	Reliant	28 (62)	Citadel Plus	
633903	(48 x 88 x 7)	Premium			
ST mattre	ess				
Part no	Size mm (in)	Top cover material	Weight kg (lb)	Arjo Trolley	
633042	670 x 1950 x 130	Reliant			
633043	(26 x 77 x 5)	Premium	10 (22)	Lifeguard Trolley	
633044	660 x 1910 x 130	Reliant			
633045	(26x 75 x 5)	Premium	9 (20)		
633046	762 x 1910 x 130	Reliant			
633047	(30 x 75 x 5)	Premium	10 (22)		
Seat cus	Seat cushion				
Part no	Size mm (in)	Top cover material	Weight kg (lb)	Arjo seats	
633016	432 x 432 x 100 (17 x 17 x 4)	Reliant	1.5 (3)	Standard size	
633018	432 x 432 x 100 (17 x 17 x 4)	Premium	1.5 (3)	Standard size	
633017	457 x 457 x 100 (18 x 18 x 4)	Reliant	1.5 (3)	Large Size	
633019	457 x 457 x 100 (18 x 18 x 4)	Premium	1.5 (3)	Large Size	

TOP COVER SPECIFICATION		
Feature	Reliant cover	Premium cover
Removable Cover	Yes	Yes
Moisture Vapour Permeable MVTR - Index method BS3424-34	10%	4%
Polyurethane coating includes an antimicrobial agent to control microbial deterioration of fabric	Yes	Yes
Fire Retardant ¹	BS 7175: 0, 1 & 5	BS 7175: 0, 1 & 5
Material stretch properties	4-way	4-way
Recommended wash Temperatures	80°C (176°F) 15 minutes	80°C (176°F) 15 minutes
Recommended Drying Temperatures	40°C (104°F) or air dry	40°C (104°F) or air dry
Maximum Drying Temperatures	Max 80°C (176°F) Max 80 °C (176 °F)	
Wipe-down Chemicals ²	 Chlorine at strength of ≤1% (10,000 ppm) at pH 7-9 Quaternary Ammonium Chloride at 1920ppm at pH 7-10 Alcohol at 70% concentration. Phenolic solutions are NOT recommended/suitable. Always rinse thoroughly with clean water after disinfection and dry before storage. Alcohol does not require rinsing with water. Further following disinfecting agents are also considered to be acceptable by the TOP COVER material manufacturer Quaternary Ammonium solution 3-15% at pH range 7-10 see Allowed disinfectants on page 33 for recommendations. Hydrogen Peroxide solution 3-10% at pH 5-9 see Allowed disinfectants on page 33 for recommendations 	
Lifetime Expectancy	Standard	Increased by x2.5 times longer when tested with accelerated aging (ISO 1419:1995)
Abrasion resistance	130 000 cycles	260 000 cycles (minimum)


¹ For additional flammability testing standards, refer to individual product law tags, if applicable.

² Chlorine concentrations may vary from 250 ppm to 10,000 ppm depending on local policy and contamination status. If an alternative disinfectant is selected from the wide variety available, Arjo recommend that suitability for use be confirmed with the chemical supplier prior to use

Labels

Labels on the Pump

LABEL EXPLANATION	
Product label	States technical performance and requirements, e.g. input power and input voltage.
Serial number label	States the item identification

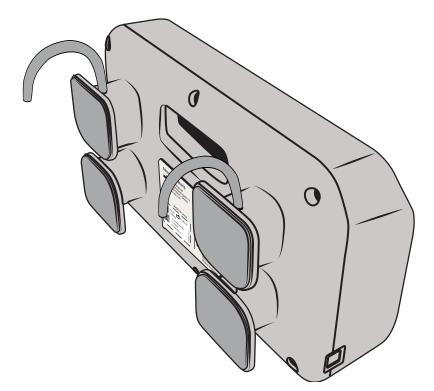

- 1. Product label
- 2. Serial number label

UK SYMBOL EXPLANATION

This section is only applicable to United Kingdom (UK) market when UK marking is applied to the Arjo medical device labelling.



UK marking indicating conformity with UK Medical Devices Regulations 2002 (SI 2002 No 618, as amended)

Figures indicate UK Approved Body supervision.

UK Responsible Person & UK Importer:

Arjo (UK) Ltd, ArjoHuntleigh House, Houghton Regis. LU5 5XF


Is the appointed UK Responsible Person as defined in UK Medical Devices Regulations 2002 (SI 2002 No 618, as amended).

For Northern Ireland (NI) CE marking will still apply until further amendment to applicable regulations.

SYMBOL EXPL	ANATION
	Refer to instruction manual/ booklet - Instructions for use should be read
CE 2797	CE marking indicating conformity with European Community harmonised legislation. Figures indicate Notified Body supervision.
MD	Indicates the product is a Medical Device according to EU Medical Device Regulation 2017/745.
CUUUS E348583	With respect to electric shock, fire and mechanical hazards only in accordance with CAN/CSA C22.2 No. 60601-1:14 + A2:2022 and ANSI/AAMI ES60601-1:2005 & A1:2012 & A2:2021. MEDICAL EQUIPMENT
SN	Serial number
REF	Reference number
	Name and address of the manufacturer
	Manufacturing date
X	Separate electrical and electronic components for recycling in accordance with the European Directive 2012/19/EU (WEEE)
Ŕ	Type BF, Applied part: protection against electrical shock in accordance with IEC 60601-1.
	Double Insulated
°C	Temperature limitation
°C -7	To indicate the temperature limitations for the product during usage
hPahPa	Atmospheric pressure limitation To indicate the acceptable upper and lower limits of atmospheric pressure for the product during usage
<u>%</u>	Humidity limitation To indicate the acceptable upper and lower limits of relative humidity for the product during usage
UDI	Unique device identifier

Labels on the surfaces

LABEL EXPLANATION	
Top cover label	States the top cover identification and maximum patient weight
Surface ID Label	States the product identification and product weight
Law tag	States certification of flammability test

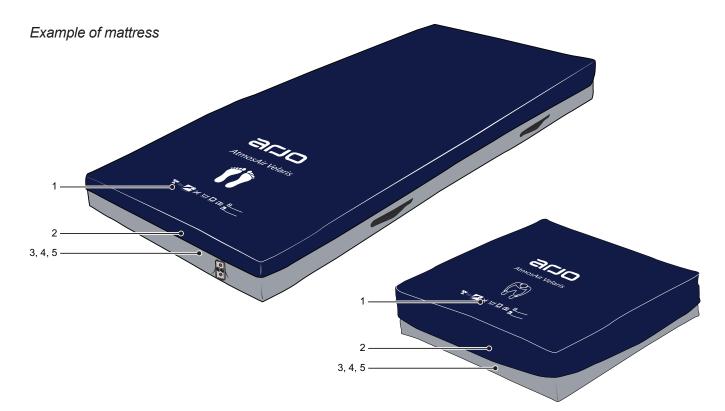

- 1. Silkscreens
- 2. Top cover label (inside the top cover)
- 3. Surface ID label (inside the bottom cover)

4. US law tag (inside the bottom cover)

5. Canadian law tag (inside the bottom cover)

UK SYMBOL EXPLANATION

This section is only applicable to United Kingdom (UK) market when UK marking is applied to the Arjo medical device labelling.



UK marking indicating conformity with UK Medical Devices Regulations 2002 (SI 2002 No 618, as amended)

UK Responsible Person & UK Importer:

Arjo (UK) Ltd, ArjoHuntleigh House, Houghton Regis. LU5 5XF

Is the appointed UK Responsible Person as defined in UK Medical Devices Regulations 2002 (SI 2002 No 618, as amended).

For Northern Ireland (NI) CE marking will still apply until further amendment to applicable regulations.

SYMBOL EXPLANATION			
	Operating instructions - Consult Instructions for use		
CE	CE marking indicating conformity with European Community harmonized legislation.		
MD	Indicates the product is a Medical Device according to EU Medical Device Regulation 2017/745.		
LOT	Lot number		
SN	Serial number		
REF	Reference number		
	Name and address of the manufacturer		
	Manufacturing date		
<u>이</u> - kg (lb)	Safe working load defines the maximum total load of the patient kg (lb) (mattresses)		
□ = kg (lb)	Safe working load defines the maximum total load of the patient kg (lb) (seat cushion)		
= kg (b)	Product weight (surface)		
Max 80°C	Recommended wash temperature: 15 min at 80 °C (176 °F)		
Bo°C Max 80°C	Tumble dry at 80 °C (176 °F)		
\mathbf{X}	Do not iron		
	Wipe surfaces with cleaning solution, then wipe with a cloth moistened with water and dry		
Н	Identifies the facility and ward where the surface is used		
Ĩ	The date when the surface was fitted to current bed frame or seat.		
UDI	Unique device identifier		

Electromagnetic compatibility

The hybrid mattress system is intended for use in the electromagnetic environment specified below. The customer or the user of the hybrid mattress system should make sure that it is used in such an environment.

Electromagnetic Compatibility (EMC)

This product complies with the requirements of applicable EMC Standards. Medical electrical equipment needs special precautions regarding EMC and needs to be installed in accordance with the following instructions:

- The use of accessories not specified by the manufacturer may result in decreased immunity of the product, or increased emissions from the product. This would affect the products performance.
- Portable and mobile radio frequency (RF) communications equipment (e.g. mobile/cell phones) can affect medical electrical equipment.
- If this equipment needs to be used adjacent to other electrical equipment, normal operation must be checked before use.

For detailed EMC information contact Arjo service personnel.

Stacking or placing other electrical equipment next to this device is not recommended, it can interfere with the equipment's operation and safety. Portable and mobile radio frequency (RF) communications equipment can interfere with this device operation and safety.

🔔 warning

The equipment may cause radio interference or may disrupt the operation of nearby device. It may be necessary to take action, such as reorienting, relocating the device or shielding the location.

GUIDANCE AND MANUFACTURER'S DECLARATION – ELECTROMAGNETIC EMISSION

The pump is intended for use in the electromagnetic environment specified below. The customer or the user of the pump should ensure that it is used in such an environment.

Emissions test	Compliance	Electromagnetic environment - guidance	
RF emissions	Group 1	The pump uses RF energy only for its internal function. Therefore, its RF emissions are very low and are not likely to cause any interference in nearby electronic equipment.	
RF emissions	Class B	This pump is suitable for use in all establishments including domestic and those directly connected to the public low voltage power supply network.	
Harmonic emissions IEC 61000-3-2	Class A		
Voltage fluctuations/ flicker emissions IEC 61000-3-3	Complies		

GUIDANCE AND MANUFACTURER'S DECLARATION - ELECTROMAGNETIC IMMUNITY

The pump is intended for use in the electromagnetic environment specified below. The customer or the user of the pump should ensure that it is used in such an environment.

Immunity test	IEC 60601 test level	Compliance level	Electromagnetic environment - guidance
Conducted RF IEC 61000-4-6	3Vrms 6Vrms ISM, 150KHz- 80MHz 80 % AM 1KHz	10Vrms 150KHz- 2300MHz	Portable and mobile RF communications equipment should be used no closer to any part of the pump, including cables, than the recommended separation distance calculated from the equation applicable to the frequency of the transmitter.
Radiated RF IEC 61000-4-3	10 V/m 80 MHz to 2.7 gHz	10 V/m	
			Recommended separation distance $d = 1.2\sqrt{P}$ 150kHz~80MHz
			d = 1.2√P 80MHz~800MHz
			d = 2.3√P 800MHz~2.7GHz
			Where P is the maximum output power rating of the transmitter in watts (w) according to the transmitter manufacturer and d is the recommended separation distance in metres (m).
			Field strengths from fixed RF transmitters, as determined by an electromagnetic site survey ^a , should be less than the compliance level in each frequency range. ^b
			Interference may occur in the vicinity of equipment marked with the following symbol:
			$((\bullet))$

Note: At 80 MHz and 800 MHz, the separation distance for the higher frequency range applies.

Note: These guidelines may not apply in all situations. Electromagnetic propagation is affected by absorption and reflection from structures, objects and people.

^a Field strengths from fixed transmitters, such as base stations for radio (cellular/cordless) telephones and land mobile radios, amateur radio, AM and FM radio broadcast and TV broadcast cannot be predicted theoretically with accuracy. To assess the electromagnetic environment due to fixed RF transmitters, an electromagnetic site survey should be considered. If the measured field strength in the location in which the pump is used exceeds the applicable RF compliance level above, the pump should be observed to verify normal operation. If abnormal operation is observed, additional measures may be necessary, such as re-orientating or relocating the pump.

^b Over the frequency range 150 kHz to 80 MHz, field strengths should be less than 3 V/m.

RECOMMENDED SEPARATION DISTANCES BETWEEN PORTABLE AND MOBILE RF COMMUNICATION EQUIPMENT AND THE PUMP

The pump is intended for use in an electromagnetic environment in which radiated RF disturbances are controlled. The customer or the user of the pump can help prevent electromagnetic interference by maintaining a minimum distance between portable and mobile RF communications equipment (transmitters) and the pump as recommended below, according to the maximum output power of the communications equipment.

Rated maximum output power	Separation distance according to frequency of transmitter - m			
of transmitter - W	150 kHz to 80 MHz	80 MHz to 800 MHz	800 MHz to 2.7 gHz	
	d = 1.2√P	d = 1.2√P	d = 2.3√P	
0.01	0.12	0.12	0.23	
0.1	0.38	0.38	0.73	
1	1.2	1.2	2.3	
10	2.8	3.8	7.3	
100	12	12	23	

For transmitters rated at a maximum output power not listed above, the recommended separation distance d in metres (m) can be estimated using the equation applicable to the frequency of the transmitter, where P is the maximum output power rating of the transmitter in watts (w) according to the transmitter manufacturer.

Note: At 80 MHz and 800 MHz, the separation distance for the higher frequency range applies. Note: These guidelines may not apply in all situations. Electromagnetic propagation is affected by absorption and reflection from structures, objects and people.

GUIDANCE AND MANUFACTURER'S DECLARATION - ELECTROMAGNETIC IMMUNITY

The pump is intended for use in the electromagnetic environment specified below. The customer or the user of the pump should ensure that it is used in such an environment.

Immunity test	IEC 60601 test level	Compliance level	Electromagnetic environment – guidance
Electrostatic discharge (ESD) IEC 61000-4-2	± 8 kV contact ± 15 kV air	± 8 kV contact ± 15 kV air	Floors should be wood, concrete or ceramic tile. If floors are covered with synthetic material, the relative humidity should be at least 30 %.
Electrical fast transient/ bursts IEC 61000-4-4	± 2 kV for power supply lines ± 1 kV for input/output lines	± 2 kV for power supply lines input/output lines not applicable	Mains power quality should be that of a typical domestic commercial or hospital environment.
Surge IEC 61000-4-5	± 1 kV line(s) to line(s)	± 1 kV line(s) to line(s)	Mains power quality should be that of a typical domestic commercial or hospital environment.
Voltage dips, short interruptions and voltage variations on power supply	<5 % μT (>95 % dip in μT) for 0.5 cycle 40 % μT	<5 % μT (>95 % dip in μT) for 0.5 cycle 40 % μT	Mains power quality should be that of a typical domestic commercial or hospital environment.
input lines IEC 61000-4-11	 40 % μT (60 % dip in μT) for 5 cycle 70 % μT (30 % dip in μT) for 25 cycles <5 % μT 	 40 % μ1 (60 % dip in μT) for 5 cycle 70 % μT (30 % dip in μT) for 25 cycles <5 % μT 	If the user of the pump requires continued operation during mains power interruptions, it is recommended that the pump is powered from an uninterrupted power supply or battery.
	(>95 % dip in μ T) for 5 s	(>95 % dip in μ T) for 5 s	
Power frequency (50/60 Hz) Magnetic field IEC 61000-4-8	30 A/m	30 A/m	Power frequency magnetic fields should be at levels characteristic of a typical location in a typical domestic commercial or hospital environment.

AUSTRALIA Arjo Australia Building B, Level 3 11 Talavera Road Macquarie Park, NSW, 2113, Australia Phone: 1800 072 040

BELGIQUE / BELGIË Arjo Belgium Evenbroekveld 16 9420 Erpe-Mere Phone: +32 (0) 53 60 73 80 Fax: +32 (0) 53 60 73 81 E-mail: info.belgium@arjo.com

BRASIL

Arjo Brasil Equipamentos Médicos Ltda Rua Marina Ciufuli Zanfelice, 329 PB02 Galpão - Lapa São Paulo – SP – Brasil CEP: 05040-000 Phone: 55-11-3588-5088 E-mail: vendas.latam@arjo.com E-mail: servicios.latam@arjo.com

CANADA

Arjo Canada Inc. 90 Matheson Boulevard West Suite 350 CA-MISSISSAUGA, ON, L5R 3R3 Tel/Tél: +1 (905) 238-7880 Free: +1 (800) 665-4831 Fax: +1 (905) 238-7881 E-mail: info.canada@arjo.com

ČESKÁ REPUBLIKA Arjo Czech Republic s.r.o.

Na Strzi 1702/65 140 00 Praha Czech Republic Phone No: +420225092307 E-mail: info.cz@arjo.com

DANMARK

Arjo A/S Vassingerødvej 52 DK-3540 LYNGE Tel: +45 49 13 84 86 Fax: +45 49 13 84 87 E-mail: dk kundeservice@arjo.com

DEUTSCHLAND Arjo GmbH Peter-Sander-Strasse 10 DE-55252 MAINZ-KASTEL Tel: +49 (0) 6134 186 0 Fax: +49 (0) 6134 186 160 E-mail: info-de@arjo.com

ESPAÑA ARJO IBERIA S.L. Poligono Can Salvatella c/ Cabanyes 1-7 08210 Barberà del Valles Barcelona - Spain Telefono 1: +34 900 921 850 Telefono 2: +34 931 315 999 FRANCE Arjo SAS 2 Avenue Alcide de Gasperi CS 70133 FR-59436 RONCQ CEDEX Tél: +33 (0) 3 20 28 13 13 Fax: +33 (0) 3 20 28 13 14 E-mail: info.france@arjo.com

HONG KONG Arjo Hong Kong Limited Room 411-414, 4/F, Manhattan Centre, 8 Kwai Cheong Road, Kwai Chung, N.T., HONG KONG Tel: +852 2960 7600 Fax: +852 2960 1711

ITALIA Arjo Italia S.p.A. Via Giacomo Peroni 400-402 IT-00131 ROMA Tel: +39 (0) 6 87426211 Fax: +39 (0) 6 87426222 E-mail: Italy.promo@arjo.com

MIDDLE EAST Arjo Middle East FZ-LLC Office 908, 9th Floor, HQ Building,North Tower, Dubai Science Park, Al Barsha South P.O. Box 11488, Dubai, United Arab Emirates Direct +971 487 48053 Fax +971 487 48072 Email: Info.ME@arjo.com

NEDERLAND Arjo Nederland BV Biezenwei 21 4004 MB TIEL Postbus 6116 4000 HC TIEL Tel: +31 (0) 344 64 08 00 Fax: +31 (0) 344 64 08 85 E-mail: info.nl@arjo.com

NEW ZEALAND Arjo Ltd 34 Vestey Drive Mount Wellington NZ-AUCKLAND 1060 Tel: +64 (0) 9 573 5344 Free Call: 0800 000 151 Fax: +64 (0) 9 573 5384 E-mail: nz.info@Arjo.com

NORGE Arjo Norway AS Olaf Helsets vei 5 N-0694 OSLO Tel: +47 22 08 00 50 Faks: +47 22 08 00 51 E-mail: no.kundeservice@arjo.com

ÖSTERREICH Arjo Austria GmbH Lemböckgasse 49 / Stiege A / 4.OG A-1230 Wien Tel: +43 1 8 66 56 Fax: +43 1 866 56 7000 POLSKA Arjo Polska Sp. z o.o. ul. Ks Piotra Wawrzyniaka 2 PL-62-052 KOMORNIKI (Poznań) Tel: +48 691 119 999 E-mail: arjo@arjo.com

PORTUGAL Arjo em Portugal MAQUET Portugal, Lda. (Distribudor Exclusivo) Rua Poeta Bocage n.º 2 - 2G PT-1600-233 Lisboa Tel: +351 214 189 815 Fax: +351 214 177 413 E-mail: Portugal@arjo.com

SUISSE / SCHWEIZ Arjo Switzerland AG Fabrikstrasse 8 Postfach CH-4614 HÄGENDORF Tél/Tel: +41 (0) 61 337 97 77 Fax: +41 (0) 61 311 97 42

SUOMI Arjo Scandinavia AB Riihitontuntie 7 C 02200 Espoo Finland Puh: +358 9 6824 1260 E-mail: Asiakaspalvelu.finland@arjo.com

SVERIGE Arjo International HQ Hans Michelsensgatan 10 SE-211 20 MALMÖ Tel: +46 (0) 10 494 7760 Fax: +46 (0) 10 494 7761 E-mail: kundservice@arjo.com

UNITED KINGDOM Arjo UK and Ireland Houghton Hall Park Houghton Regis UK-DUNSTABLE LU5 5XF Tel: +44 (0) 1582 745 700 Fax: +44 (0) 1582 745 745 E-mail: sales.admin@arjo.com

USA Arjo Inc. 2349 W Lake Street Suite 250 US-Addison, IL 60101 Tel: +1 (630) 307-2756 Free: +1 (800) 323-1245 Fax: +1 (630) 307 6195 E-mail: us.info@arjo.com

JAPAN Arjo Japan K.K. 東京都港区虎ノ門三丁目7番8号 ランディック第2虎ノ門ビル9階 Tel: +81 (0)3-6435-6401 Fax: +81 (0)3-6435-6402 E-mail: info.japan@arjo.com

At Arjo, we believe that empowering movement within healthcare environments is essential to quality care. Our products and solutions are designed to promote a safe and dignified experience through patient handling, medical beds, personal hygiene, disinfection, diagnostics, and the prevention of pressure injuries and venous thromboembolism. With over 6500 people worldwide and 65 years caring for patients and healthcare professionals, we are committed to driving healthier outcomes for people facing mobility challenges.



