



## User interface changes

Software version v1.0 Sara Plus PCB

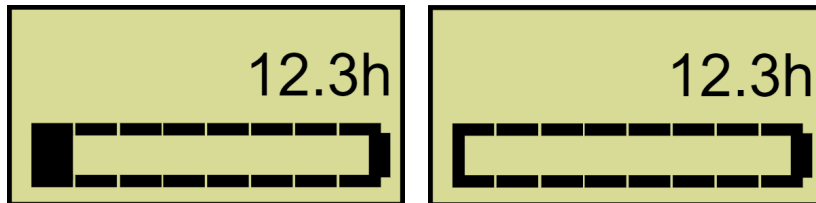


If, during movement, the battery indication drops from high charge to one or zero bars, the battery is starting to deteriorate (it can still be used till fully discharged). Replace and fully charge the battery.

Note that the buzzer indication of empty battery has been shortened to two seconds after all buttons release.

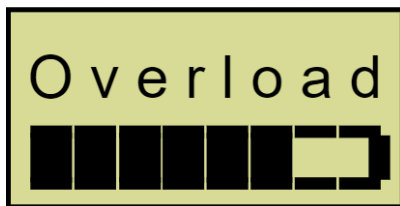

If overload occurs it is not possible to start movement in the same direction for four seconds.

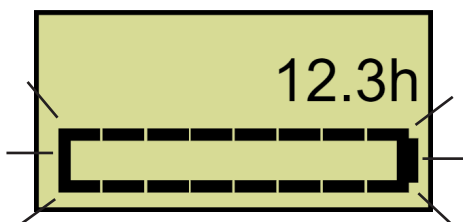

If the battery indicator is blinking the battery is considered depleted. Replace and recycle the battery according to local guidelines.