INSTRUCTIONS FOR USE







The model name and serial number should always be provided when ordering spare parts or during queries per telephone or written correspondence:

Serial number of the machine:

.....

Machine model:

.....

WARNING

To avoid injury, always read this *Instructions for Use* and accompanied documents before using the product.



Mandatory to read the Instructions for Use.

Design Policy and Copyright

® and ™ are trademarks belonging to the Arjo group of companies.

© Arjo 2023.

As our policy is one of continuous improvement, we reserve the right to modify designs without prior notice. The content of this publication may not be copied either whole or in part without the consent of Arjo.

Contents

PF	REFAC	CE	5
	Defi	initions in this IFU	6
1	SAFE	ETY PRECAUTIONS	7
	1.1	Important	7
	1.2	Isolator switch	8
	1.3	In an emergency	8
2	PRE	SENTATION	9
	2.1	Area of application	9
	2.2	Models	9
	2.3	Control panel	10
		2.3.1 Components	10
		2.3.2 Functions	10
	2.4	Display options	11
		2.4.1 Displayed while a program is running	11
		2.4.2 Display after program end	11
3	OPE	RATING INSTRUCTIONS	12
	3.1	Program overview	12
	3.2	Run a program	13
		3.2.1 Start a program	13
		3.2.2 During ongoing program	13
		3.2.3 After program completion	13
	3.3	Cooling	14
	3.4	Examples of items and program selection	
4	MAIN	NTENANCE	15
	4.1	Flushing chamber	15
	4.2	The outside	15
	4.3	Preventive maintenance	15
		4.3.1 Periodic maintenance	15
		4.3.2 Service table	16
	4.4	Machines that are not in use	18
5	ALAF	RM	19
	5.1	Alarm indication	19
	5.2	Acknowledgement of error message	
	5.3	During a power failure	
6	TRO	OUBLESHOOTING	20
	6.1	List of codes	20
	6.2	Types of codes	20
7	DETI	ERGENT	21
	7.1	Using detergent	21
	7.2	Flushing detergent	21
	7.3	Positioning	22
	7.4	Switching	22

NATER QUALITY			
23			
23			
23			
23			
24			
25			
25			
25			
25			
26			
26			
END OF LIFE DISPOSAL			
SYMBOL EXPLANATION			
ELECTROMAGNETIC COMPATIBILITY			

PREFACE

This Instructions for use (IFU) describes the design and operation of the machine and the maintenance for which the user is responsible. The Assembly and installation instructions describes the machine's installation. The Technical manual describes necessary information for operators and maintenance personnel. The information in the manual must be complied with to ensure safe and error-free operation.

Users must read through this Instructions for use before using the machine for the first time, as well as familiarizing themselves with the operation of the machine and its safety instructions. Operators and maintenance personnel must have completed training through the marketing organization of Arjo.

The information in this Instructions for use describes the machine as dispatched from Arjo. There may be differences due to customization for customers or countries.

Availabel models:

- FD1600 Free standing model with polymer chamber
- FD1610 Free standing model with stainless steel chamber
- FD1615 Under counter model with stainless steel chamber

The machine is accompanied by the following documentation:

- Instructions for use
- · Assembly and installation instructions
- Quick reference guide

The following documentation shall be provided by the sales company to the end-user on request:

- Technical manual
- · Spare parts list

The accompanying Quick reference guide must be hung up and clearly visible in the installation area.

Arjo reserves the right to change the specification and design without prior notice. The information in this Instructions for use was up-to-date on the date that it was issued.

Definitions in this IFU



Safety warning. Failure to understand and obey this warning may result in injury or machine damage.



Hot surface. Risk of injury.



Dangerous voltage. Risk of injury.



Note means: This is important information for the correct use of this system or device.

1 SAFETY PRECAUTIONS

This machine has been designed with a number of built-in safety devices.

To avoid injury, it is highly important not to bypass these safety devices.

1.1 Important

- The machine is designed for connection to water only (and for steam if applicable).
- Read the Instructions for use thoroughly before use.
- The machine should only be handled by authorized personnel. Personnel must also receive regular training.
- If any part is missing or damaged do NOT use the product.
- Exercise caution when using the machine, as it uses hot water and possibly steam.
- Exercise caution when handling the chemical agent used in the machine. Follow the instructions on the agent:
 - if the agent is swallowed, comes into contact with the eyes or skin or if vapors are inhaled.
 - for instructions on dosage amount and washing temperatures.
 - for instructions regarding storage and sorting/disposal of packing.
- Make sure that the machine has access to detergent before the process starts. This is important both for the operation of the machine and for keeping the washing chamber free from staining.
- The machine must be kept clean if it is to work properly.
- Do not wash down or hose down the machine with water.
- Installation and service work must be performed by trained personnel.
- Never bypass the machine's door switch under any circumstances.
- Always connect the equipment via an RCD (residual current device).
- Always use a grounded power supply for the flusherdisinfector.
- Leakage in the system, for example a worn door seal, must be rectified without delay.
- Spare parts must only be obtained from Arjo's sales companies.
- If a serious incident occurs in relation to this medical device, affecting the user, or the patient then the user or patient should report the serious incident to the medical device manufacturer or the distributor. In the European Union, the user should also report the serious incident to the Competent Authority in the member state where they are located.

1.2 Isolator switch

The machine must always be equipped with a separate isolator switch in the feed power supply. The isolator switch must be easily accessible on a wall close to the machine. The external electrical isolator switch must be marked "I" and "O" to identify the position of the switch.

1.3 In an emergency

- Switch off the main switch.
- Close shutoff valves in the water and any steam supply lines.

2 PRESENTATION

2.1 Area of application

Flusher-disinfector for emptying, cleaning and disinfecting, bedpans, urine bottles and other containers for human waste.

To meet the requirements of EN ISO 15883, the items must be placed in the proper holder, recommended by Arjo.

The customer is responsible for ensuring that an Installation Qualification, Operating Qualification and Performance Qualification according to ISO 15883 are carried out before the product is put into use.

2.2 Models

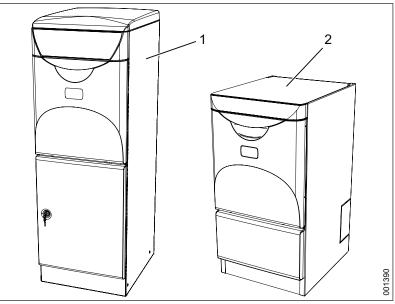



Figure 1. Machine models

1.

Free-standing model 2. Under-bench model

2.3 Control panel

2.3.1 Components

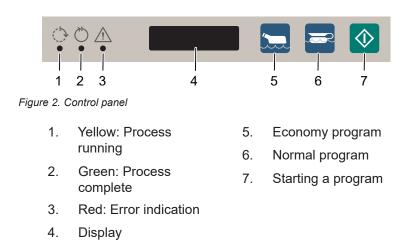

2.3.2 Functions

	Function
ð	Yellow flashing indicator light: The process can be aborted. Yellow indicator light: The machine is running a program. The display shows the current status*, for example the cleaning phase and temperature.
ð	Green indicator light: The program is complete. The green light goes out when the door is opened and for a short time a program summary* is shown in the display, for example maximum temperature.
Ń	Red indicator light: Error indication. The display shows an error message.
	Button for choosing economy program for lightly soiled goods.
	Button for choosing normal program for normally soiled goods.
\Diamond	Button for starting a program.

* The information displayed depends on the display options.

2.4 Display options

A service technician can set the information to be shown in the display.

2.4.1 Displayed while a program is running

The display can be set to show one of the following alternatives while a program is running:

- Temperature
- A₀ value
- A₀ value / Temperature
- Remaining Time
- Temperature / Remaining time
- A₀ value / Remaining time
- A₀ value / Remaining time / Temperature

If an alternative with more than one parameter is selected, the parameters will be displayed alternately. The A_0 value always remains at 0 until the thermal disinfection begins. When the temperature reaches 85°C, the A0value will increase in line with the temperature and time.

2.4.2 Display after program end

The display can be set to show one of the following alternatives once a program has finished:

- Max. temperature
- A₀ value
- A_o value / Max temperature

If an alternative with more than one parameter is selected, the parameters will be displayed alternately.

3 OPERATING INSTRUCTIONS

WARNING!





To prevent contamination, use personal protective equipment, such as gloves and protective glasses, when handling soiled waste containers and loading the goods into the flusher-disinfector.

3.1 Program overview

The machine's standard programs are described here. There may be other programs for the program buttons. A service technician can change the button functions.

Program	Economy	Normal
Goods	Lightly soiled	Normally soiled
Кеу		
Process	Cleaning Disinfection Ventilation (Option) End of program	Cleaning Disinfection Ventilation (Option) End of program
Time*	6–10 min	7–11 min
Energy	0.16 kWh	0.16 kWh
Water**	11 + - 10%	18 +- 10%

* The process times may vary according to which cooling/ ventilation method is used. They may also vary depending on water temperature and pressure.

** Including cooling.

3.2 Run a program

3.2.1 Start a program



WARNING! If the machine has not been used for more than 72 hours, it is processery to run a program with

72 hours, it is necessary to run a program with an empty chamber before using the machine to clean goods.

- 1. Open the door.
- 2. Place the goods to be cleaned in the holder.
- 3. Close the door.
- 4. Select program:

 - Economy program: Press 🔜, then 🐼.
- 5. The yellow light at ⊖ flashes for six seconds. During this period the program can be cancelled by pressing ♦.

3.2.2 During ongoing program



WARNING! If the red indicator lights up an error has occurred. The process is cancelled and must be repeated.

3.2.3 After program completion



WARNING! The goods may be hot at the end of the program. If the temperature of the goods is above 60°C, the display shows U7.

- 1. When the program is complete:
 - The green light at [₼] lights up.
 - The door unlocks automatically.
 - Cooling/Ventilation of goods may continue after completed program (option) and is thus terminated when the door is opened.
- 2. Open the door and remove the goods.

3.3 Cooling

A ventilator starts when the disinfection is complete:

- Warm air is sucked out of the chamber.
- New air is introduced via a HEPA filter.

The items to be washed are cooled using the following method:

- Internal cooling: items to be washed are cooled using water from a tank.
- Fan (option): items cooled by cold air from an external fan. The air is introduced via a HEPA filter.

Cooling/Ventilation can continue after completed process (option). When the green lamp is lit the cooling/ventilation can be terminated by opening the door.

3.4 Examples of items and program selection

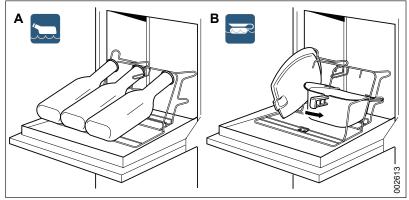


Figure 3. Example of goods for economy program (A) and normal program (B)

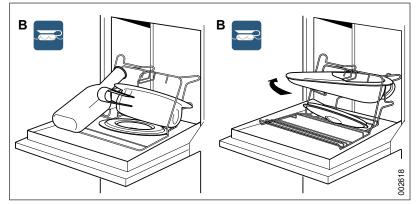


Figure 4. Example of goods for normal program (B)

4 MAINTENANCE

4.1 Flushing chamber

If limescale deposits occur, they must be removed with a proper descaler that is intended for the purpose such as Arjo Clean Neutralizer Plus. See the instructions for the agent before using it.

4.2 The outside



WARNING! Do not wash the machine down with water.

The outside of the machine can be cleaned and disinfected with an alcohol-based cleaning agent or medicinal alcohol. The area around the display should be cleaned with an alcohol-based cleaner.

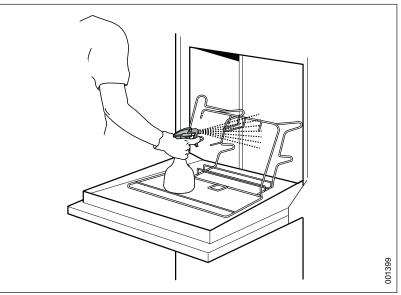


Figure 5. Cleaning the machine

4.3 **Preventive maintenance**

For safety purposes, never modify equipment or use incompatible parts.

4.3.1 Periodic maintenance

Periodic maintenance and system testing must be performed to ensure safety and the machine's proper operation.

The amount of maintenance required depends largely on the quality of the incoming water and how often the machine is used. The maintenance interval will have to be determined in each individual case. Arjo recommends that the stated maintenance operations be performed at intervals according to the service table.

4.3.2 Service table



WARNING! Maintonanco may only bo por

Maintenance may only be performed by authorized service technicians.



WARNING! The machine is connected to the electricity supply and some components are live.

Note!

The service table is only shown for information purposes.

The service table below shows recommended maintenance intervals.

In addition to system testing, we recommend that appropriate cleaning tests and temperature validation are performed according to EN ISO 15883.

	Measure	Every year/ 7,500 cycles	Every other year/15,000 cycles	Time* (minutes)
1	General			
1.1	Check the cabling and connection points.	•		10
1.2	Check the function of the cooling fan. Clean as required.	•		5
1.3	Check that the panel label is firmly affixed, is undamaged and legible.	•		2
1.4	Check that the door lock and breaker are functioning properly.	•		5
1.5	Check that a goods placement sign and quick help • instructions have been put up.		1	
1.6	Check error codes and the number of processes.	•	2	
2	The chamber			
2.1	Check that the rotating nozzles are moving freely. Clean as required.	•		20
2.2	Check that the fixed nozzles are not clogged with grime and deposits. Clean as required.	•		20
2.3	Check for leakage in the nozzle attachments and the hose connections to the chamber.	•		-
2.4	Check for proper operation of the temperature sensor.	•		10
2.5	Check that the door seal and chamber seal are tight. Clean or replace as necessary.	•		10
2.6	Check the mounting for the goods holder.		2	
2.7	Check that the overflow drain connection to the chamber is tight.		•	-
2.8	Clean the inside of the flushing chamber.	•		10

	Measure	Every year/ 7,500 cycles	Every other year/15,000 cycles	Time* (minutes)
2.9	Check the door and door spring. •			
3	Process tank			
3.1	Clean as required.	•		-
3.2	Check and clean the level sensor.	•		5
3.3	Check that the valves are working and that the connections are not leaking. Clean as required.	•		10
4	Steam Generators			
4.1	Check the connections to the steam generator for leakage and make sure the surrounding insulation is intact and no hot surfaces are exposed.		5	
4.2	Check that the steam generator is working properly.	•		10
5	Main pump			
5.1	Check that the main pump is firmly attached and that • • • • • • • • • • • • • • • • • • •		5	
6	Dosing system			
6.1	Check the hoses between the dosing pump and the detergent holder. Replace if necessary.	•		5-10
6.2	Check the dosage amount. Adjust if necessary.		10-30	
6.3	Replace hose in the dosing pump.	•		5
6.4	Check that the empty container alarm works. Clean or replace as necessary.	•		5
6.5	Check the function of the check valve in the steam generator.	•		5
7	Drainage connection			
7.1	Check that the drainage connection is firmly attached and that it is not leaking.	•		5
8	Ventilator (Option)			
8.1	Replace HEPA filter.	•		10
8.2	Check the fan for proper operation and check that the connections are tight.	•		5
8.3	Check that the check valves are functioning properly. Clean as required.	•		10
8.4	Check hoses to the fan.	•		5
10	Function check (at each service)			
10.1	Run a complete process and be sure there are no deviations according to the periodic checkpoints.			
10.2	Check that the panel's lights and alarms are functioning	g.		

* The time required is estimated with the top off and may vary depending on the installation settings, operating conditions and equipment level.

4.4 Machines that are not in use

A machine that is not being used should be drained. Contact a service technician.

5 ALARM

5.1 Alarm indication



WARNING! If the disinfection process is cancelled, the goods are not clean. The goods must be processed again.

If the red lamp at \triangle lights up, the disinfection has been aborted. The display shows an error message, see "Troubleshooting".

5.2 Acknowledgement of error message



WARNING! Only to be carried out by authorized staff.

Some error messages need to be acknowledged before the machine can be returned to run mode. When the cause of the error has been found and the error has been put right, the error message is acknowledged as follows:

First press the \searrow button, then the \diamondsuit button. Keep both buttons pressed at the same time for 5 seconds. If the error has not been corrected, the error message cannot be acknowledged. The machine is now ready to operate. Re-run the aborted program to disinfect the items. If the error persists, call service personnel.

5.3 During a power failure

If the power fails during a process, the machine remains locked. When the power returns, the machine restarts the process automatically.

6 TROUBLESHOOTING

6.1 List of codes

Code	Description	Measure
U1	Lime descaler low level	Top up descaler agent.
U2	Process agent low level	Top up process agent.
U3	Rinse-aid low level	Top up rinse-aid
U7	Warning of high temperature for goods	Let the goods cool down.
U9	Inactivity warning	The machine has been inactive for 72 hours. A program with an empty chamber must be run before using the machine to clean goods.
H6	Start attempt with door open	Close the door (the machine makes a new start attempt). If the error recurs, contact authorized service personnel.
H7	Cannot lock door	Acknowledge the error as described above. Close the door correctly. Make a fresh start attempt. If the error recurs, contact authorized service personnel.
H8	Cannot unlock door	Acknowledge the error as described on the previous page If the error recurs, contact authorized service personnel.
F1	Temperature sensor error	Contact authorized service personnel.
F4	Logic error in door, door locked but not closed.	Contact authorized service personnel.
F7	Disinfection temperature not reached.	Contact authorized service personnel.
F8	Door open/unlocked during process	Contact authorized service personnel.
F9	Settings error (E2 error)	Contact authorized service personnel.
F10	Could not fill/empty tank	Contact authorized service personnel.
F11	Leakage	Contact authorized service personnel.
F13	Program error	Contact authorized service personnel.

The tables below describe the error messages that can be generated as well as possible measures.

6.2 Types of codes

- Ux is an information code.
- Hx is a handling code.
- Fx is an error code.

7 DETERGENT

7.1 Using detergent



WARNING!

Using other detergents, especially acidic ones, may damage the machine (dosing pumps, steam generators and pipes).



WARNING!

Follow the instructions for the container for additional instructions on using the detergent.

The machine has been proven and tested with Arjo's detergents. We recommend that you use Arjo detergents.

- Chemicals recommended in the Instructions for use does not mean that the manufacturer of the machine accepts liability for any impact the agent has on goods to be washed.
- Changes in the composition, conditions etc. that were not reported by the manufacturer may affect the result of the cleaning process.
- Always follow the instrument manufacturer's instructions when you use new instruments.
- The dosage amount depends on the water quality. For more information see the process chemicals product specification.

7.2 Flushing detergent

Following detergents can be ordered from Arjo sales companies.

Agent	Description
■ ARJO LIQUIDS FLUSHER DETERGENT	A mild alkaline detergent to be used for automated cleaning of human waste containers.
ARJO LIQUIDS FLUSHER RINSE	A mild alkaline solution to be used for automated rinsing of human waste containers and system piping to prevent hard water scale build up.

7.3 Positioning

The illustration below shows, for example, where to place the detergent for the free-standing model.

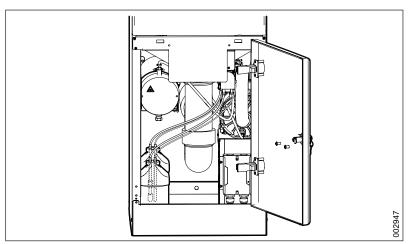


Figure 6. Example of the placement of detergent

7.4 Switching





To avoid eye and skin damage, always use protective glasses and gloves. If contact occurs rinse with plenty of water. If eyes or skin becomes irritated, contact a physician. Always read the material safety data sheet of the detergent.

When replacing with a new container, always check that the detergent is correctly connected. The color of the ring on the low level alarm (A) should be the same as the color on the side of the container (B).

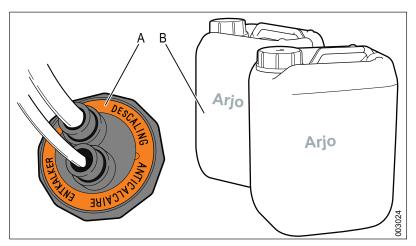


Figure 7. Checking the detergent

8 WATER QUALITY



WARNING! It is the customer's responsibility to supply the washer-disinfector with water of the right quality.

The quality of the water used in all stages of cleaning is important for good cleaning results.

8.1 Requirements

The water used in each stage must be compatible with:

- The material that the machine is made of.
- The chemicals used in the process.
- Process requirements for the various stages of the process

8.2 Main factors

The main factors for good water quality are:

Hardness: High hardness will cause limescale deposits in the washer-disinfector, leading to poor cleaning results.

Ionic contaminants: A high concentration of ionic contaminants may cause corrosion and pitting on stainless steel. Heavy metals such as iron, manganese or copper cause instruments to tarnish.

Microbial contaminants: Goods to be washed are treated for microorganisms and their residual products, which may cause fever-like symptoms if they get into the human body. Use water that does not increase the biological load.

Sanitary chemicals: High concentrations of, and high exposure to, sanitary chemicals may cause corrosion and pitting on stainless steel.

8.3 Recommendation

- Arjo recommends that water used in the pre-rinsing, washing and final rinsing phases should be of drinking quality in accordance with the guidelines.
- Recommended water quality is drinking water with max 5°dH.
- Detailed information about acceptable water quality can be found in "Guidelines for Drinking Water Quality" published by WHO.

8.4 Local standard

Follow local standards if they are stricter than Arjo's recommendations. Especially when treated water is used for the final washing/disinfection phase.

Additional advice should also be obtained from the manufacturers of chemical and medical equipment.

8.5 Local standard, typical specification

A typical specification for treated water is:

рН	5.5 to 8
Conductivity	<30 µs.cm-1
TDS	<40 mg/l
Maximum hardness	<50 mg/l
Chlorine	<10 mg/l
Heavy metals	<10 mg/l
Phosphates	<0.2 mg/l as P2O5
Silicates	<0.2 mg/l as SiO2
Endotoxins	<0.25 EU/ml
Total number of micro-organisms	<100 per 100 ml

9	ENVIRONMENTAL PRODUCT DECLARATION

	Plastic		Stainless steel	
	FD1600	FD1605 UB	FD1610	FD1615 UB
Total weight kg / % by weight	90 / 100	65 / 100	100/ 100	75 / 100
Mechanical parts				
Stainless steel	41 / 45.5	21 / 32.3	60 / 60	35 / 46.6
Steel	1 / 1.1	1 / 1.5	1 / 1	1 / 1.3
Cast iron	13 / 14.4	13 / 20	13 / 13	13 / 17.3
Copper	1 / 1.1	1 / 1.5	1 / 1	1 / 1.3
Plastic	25 / 27.7	25 / 38.4	16 / 16	16 / 21.3
Rubber	3 / 3.3	3 / 4.6	3/3	3 / 4
Other mech. parts	2 / 2.2	2/3	2/2	2 / 2.6
Electrical / Electronics				
Wiring	1 / 1.1	1 / 1.5	1 / 1	1 / 1.3
Circuit boards	0.2 / 0.2	0.2 / 0.3	0.2 / 0.2	0.2 / 0.3
Other components	2.8 / 3.1	2.8 / 4.3	2.8 / 2.8	2.8 / 3.7

9.1 Comments

Other components consists of pumps, door motors, etc. which cannot be weighed or divided up in the same way as other parts. There is no mercury in the machine or its components.

9.2 Distribution

The machines are packed on wooden pallets and clad with corrugated cardboard, or wrapped in plastic. Users must make sure that the packaging material is sorted and recycled.

9.3 Use

The flusher-disinfector affects the environment during its entire life cycle. Our assessment is that electric power and water consumption have the greatest impact on the environment. In total during the lifecycle the machines use approx 11000 kWh of electricity and approx 1300 m³ of water. A total of approx 210 liters of detergent are released into the drainage system, dependent on the programs/dosages of the machine.

9.4 Waste disposal

The machines consist mainly of stainless steel, plastics/rubber/glass and other recyclable metals. When the machine is scrapped the materials should be recycled. Wiring and printed circuit boards contain environmentally hazardous substances such as lead, cadmium, PVC and brominated flame retardants, and must be recycled as electronic scrap. Plastics and rubber must be sorted separately.

9.5 Load pallets

The pallet that the machine is delivered on is manufactured and labeled according to ISPM15. This label means that the wood packaging is dried and heat-treated, KD 56°C/30 min.

10 END OF LIFE DISPOSAL



WARNING! The product may be contaminated and has to be disinfected before recycling.

Equipment that has electrical and electronic components should be disassembled and recycled per Waste of Electrical and Electronic Equipment (WEEE) or in accordance with local or national regulation.

Disinfection liquids – if you have extra liquid, it's safe to pour it down the drain with running water. These products are water soluble and usually mixed with water when used for cleaning, your municipality will treat these cleaners the same way they would if you used them for cleaning.

The packaging containers should be recycled according to the national or local regulations.

11 SYMBOL EXPLANATION

Symbol	Explanation
	Warning
	Warning, hot surface
4	Warning, dangerous voltage
	Wear protective gloves
	Wear eye protection
	Refer to instruction manual/booklet - Instructions for use should be read
	Name and address of the manufacturer
	Manufacturing date
\square	Use by date
REF	Catalogue number
SN	Serial number
MD	Indicates the product is a Medical Device according to EU Medical Device Regulation 2017/745
UDI	Unique device identifier
CE 2797	CE marking indicating conformity with European Community harmonized legislation Figures indicate Notified Body supervision
IP22	IP = Ingress Protection, a rating value for the protection against mechanical ingress and water ingress
WaterMark WMTS104 LicVMM/26397 SAI Global Jucument	WaterMark certification label with license number WMK26397

Symbol	Explanation		
WRAS APPROVED	Water Supply (Water Fittings) Regulations and Scottish Water Byelaws		
c Intertek	Intertek Warnock Hersey Certification Mark		
c C Letter Intertek	Electrical test label. Indicates ETL Certification through Intertek. The proof of product compliance to North American safety standards		
DVGW CERT Anschlusssicher W 540	DVGW CERT Conformity Certificate		
BRL-K14011	Dutch safety certification for water safety		
X	Separate electrical and electronic components for recycling in accordance with the European Directive 2012/19/EU (WEEE)		
HDPE	Recyclable, the number (2) indicates high-density polyethylene		

UK symbol explanation				
	only applicable to United Kingdom (UK) market when UK marking is applied to the evice labelling.			
UK CA 0086	UK marking indicating conformity with UK Medical Devices Regulations 2002 (SI 2002 No 618, as amended) Figures indicate UK Approved Body supervision.			
UK Responsible Person & UK Importer: Arjo (UK) Ltd, ArjoHuntleigh House, Houghton Regis. LU5 5XF				
Is the appointed UK Responsible Person as defined in UK Medical Devices Regulations 2002 (SI 2002 No 618, as amended).				

For Northern Ireland (NI) CE marking will still apply until further amendment to applicable regulations.

12 ELECTROMAGNETIC COMPATIBILITY

Intended environment: industrial electromagnetic environment

Guidance and manufacturer's declaration – electromagnetic emission					
Emmision test	Compliance	Guidance			
RF emissions CISPR 11	Group 1	This equipment uses RF energy only for its internal functions. Therefore its RF emissions are very low and are not likely to cause any interference in nearby electronic equipment.			
RF emissions CISPR 11	Class A	This equipment is suitable for use in all establishments, including domestic establishments and those directly connected to the public low voltage power supply network that supplies buildings used for domestic purposes.			

Guidance and manufacturer's declaration – electromagnetic immunity					
Immunity test	IEC 60601-1-2 test level / performance criterion	Compliance level / performance criterion			
Electrostatic discharge (ESD) IEC 61000-4-2	±4 kV contact discharge / B ±8 kV air discharge / B	±4 kV contact discharge / B ±8 kV air discharge / B			
Conducted disturbances inducted by RF fields IEC 61000-4-6	3 V in 0,15 MHz to 80 MHz / A	3 V in 0,15 MHz to 80 MHz / A			
Radiated RF electromagnetic field IEC 61000-4-3	10 V/m (80 MHz to 1 GHz) / A 3 V/m (1,4 GHz to 2 GHz) / A 1 V/m (2 GHz to 2,7 GHz) / A	10 V/m (80 MHz to 1 GHz) / A 3 V/m (1,4 GHz to 2 GHz) / A 1 V/m (2 GHz to 2,7 GHz) / A			
Electrical fast transient/burst IEC 61000-4-4	±2 kV AC port / B 5 kHz repetition frequency	±2 kV AC port / B 5 kHz repetition frequency			
Power frequency Magnetic field IEC 61000-4-8	30 A/m 50 Hz or 60 Hz / A	30 A/m 50 Hz / A			
Surge IEC 61000-4-5	±1 kV line-to-line / B ±2 kV line-to-ground / B	±1 kV line-to-line / B ±2 kV line-to-ground / B			
Voltage dips, short interruptions and voltage variations on power supply input lines IEC 61000-4-11	0 % UT; 1 cycle / B 40% Utl 10/12 cycles* / C 70% during 25/30 cycles* / C 0% during 250/300 cycles* / C	0 % UT; 1 cycle / B 40% Utl 10/12 cycles* / C 70% during 25/30 cycles* / C 0% during 250/300 cycles* / C			
*For example: "25/30 cycles" menas "25 cycles for 50 Hz test" or "30 cycles for 60 Hz test".					
Note: UT is the AC mains voltage prior to application of the test level.					

AUSTRALIA Arjo Australia Building B, Level 3 11 Talavera Road Macquarie Park, NSW, 2113, Australia Phone: 1800 072 040

BELGIQUE / BELGIË

Arjo Belgium Evenbroekveld 16 9420 Erpe-Mere Phone: +32 (0) 53 60 73 80 Fax: +32 (0) 53 60 73 81 E-mail: info.belgium@arjo.com

BRASIL

Arjo Brasil Equipamentos Médicos Ltda Rua Marina Ciufuli Zanfelice, 329 PB02 Galpão - Lapa São Paulo – SP – Brasil CEP: 05040-000 Phone: 55-11-3588-5088 E-mail: vendas.latam@arjo.com E-mail: servicios.latam@arjo.com

CANADA

Arjo Canada Inc. 90 Matheson Boulevard West Suite 350 CA-MISSISSAUGA, ON, L5R 3R3 Tel/Tél: +1 (905) 238-7880 Free: +1 (800) 665-4831 Fax: +1 (905) 238-7881 E-mail: info.canada@arjo.com

ČESKÁ REPUBLIKA

Arjo Czech Republic s.r.o. Na Strzi 1702/65 140 00 Praha Czech Republic Phone No: +420225092307 E-mail: info.cz@arjo.com

DANMARK

Arjo A/S Vassingerødvej 52 DK-3540 LYNGE Tel: +45 49 13 84 86 Fax: +45 49 13 84 87 E-mail: dk_kundeservice@arjo.com

DEUTSCHLAND Arjo GmbH Peter-Sander-Strasse 10 DE-55252 MAINZ-KASTEL Tel: +49 (0) 6134 186 0 Fax: +49 (0) 6134 186 160 E-mail: info-de@arjo.com

ESPAÑA ARJO IBERIA S.L. Poligono Can Salvatella c/ Cabanyes 1-7 08210 Barberà del Valles Barcelona - Spain Telefono 1: +34 900 921 850 Telefono 2: +34 931 315 999 FRANCE Arjo SAS 2 Avenue Alcide de Gasperi CS 70133 FR-59436 RONCQ CEDEX Tél: +33 (0) 3 20 28 13 13 Fax: +33 (0) 3 20 28 13 14 E-mail: info.france@arjo.com

HONG KONG

Arjo Hong Kong Limited Room 411-414, 4/F, Manhattan Centre, 8 Kwai Cheong Road, Kwai Chung, N.T., HONG KONG Tel: +852 2960 7600 Fax: +852 2960 1711

ITALIA

Arjo Italia S.p.A. Via Giacomo Peroni 400-402 IT-00131 ROMA Tel: +39 (0) 6 87426211 Fax: +39 (0) 6 87426222 E-mail: Italy.promo@arjo.com

MIDDLE EAST

Arjo Middle East FZ-LLC Office 908, 9th Floor, HQ Building,North Tower, Dubai Science Park, Al Barsha South P.O. Box 11488, Dubai, United Arab Emirates Direct +971 487 48053 Fax +971 487 48072 Email: Info.ME@arjo.com

NEDERLAND

Arjo Nederland BV Biezenwei 21 4004 MB TIEL Postbus 6116 4000 HC TIEL Tel: +31 (0) 344 64 08 00 Fax: +31 (0) 344 64 08 85 E-mail: info.nl@arjo.com

NEW ZEALAND

Arjo Ltd 34 Vestey Drive Mount Wellington NZ-AUCKLAND 1060 Tel: +64 (0) 9 573 5344 Free Call: 0800 000 151 Fax: +64 (0) 9 573 5384 E-mail: nz.info@Arjo.com

NORGE

Arjo Norway AS Olaf Helsets vei 5 N-0694 OSLO Tel: +47 22 08 00 50 Faks: +47 22 08 00 51 E-mail: no.kundeservice@arjo.com

ÖSTERREICH Arjo Austria GmbH Lemböckgasse 49 / Stiege A / 4.OG A-1230 Wien Tel: +43 1 8 66 56 Fax: +43 1 866 56 7000 POLSKA Arjo Polska Sp. z o.o. ul. Ks Piotra Wawrzyniaka 2 PL-62-052 KOMORNIKI (Poznań) Tel: +48 691 119 999 E-mail: arjo@arjo.com

PORTUGAL Arjo em Portugal MAQUET Portugal, Lda. (Distribudor Exclusivo) Rua Poeta Bocage n.º 2 - 2G PT-1600-233 Lisboa Tel: +351 214 189 815 Fax: +351 214 177 413 E-mail: Portugal@arjo.com

SUISSE / SCHWEIZ Arjo Switzerland AG Fabrikstrasse 8 Postfach CH-4614 HÄGENDORF Tél/Tel: +41 (0) 61 337 97 77 Fax: +41 (0) 61 311 97 42

SUOMI Arjo Scandinavia AB Riihitontuntie 7 C 02200 Espoo Finland Puh: +358 9 6824 1260 E-mail: Asiakaspalvelu.finland@arjo.com

SVERIGE Arjo International HQ Hans Michelsensgatan 10 SE-211 20 MALMÖ Tel: +46 (0) 10 494 7760 Fax: +46 (0) 10 494 7761 E-mail: kundservice@arjo.com

UNITED KINGDOM Arjo UK and Ireland Houghton Hall Park Houghton Regis UK-DUNSTABLE LU5 5XF Tel: +44 (0) 1582 745 700 Fax: +44 (0) 1582 745 745 E-mail: sales.admin@arjo.com

USA Arjo Inc. 2349 W Lake Street Suite 250 US-Addison, IL 60101 Tel: +1 (630) 307-2756 Free: +1 (800) 323-1245 Fax: +1 (630) 307 6195

E-mail: us.info@arjo.com JAPAN Arjo Japan K.K. 東京都港区虎ノ門三丁目7番8号 ランディック第2虎ノ門ビル9階 Tel: +81 (0)3-6435-6401 Fax: +81 (0)3-6435-6402 E-mail: info.japan@arjo.com

At Arjo, we believe that empowering movement within healthcare environments is essential to quality care. Our products and solutions are designed to promote a safe and dignified experience through patient handling, medical beds, personal hygiene, disinfection, diagnostics, and the prevention of pressure injuries and venous thromboembolism. With over 6500 people worldwide and 65 years caring for patients and healthcare professionals, we are committed to driving healthier outcomes for people facing mobility challenges.



ArjoHuntleigh AB Hans Michelsensgatan 10 211 20 Malmö, Sweden

www.arjo.com

