

Maxi Sky 1000

Lift from seated position




1



Place the sling around the patient, with the base of the sling slightly below the tail bone.

For sling with head support extend to top of patient's head.

2

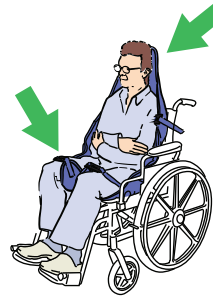

Pull each leg strap under the thigh so that it emerges on the inside of the thigh.


Approach the patient with the lift.

Place the spreader bar in sitting position.


Place the spreader bar at or just below shoulder level.

Place the spreader bar close enough to be able to attach the shoulder straps.

3




Loop sling

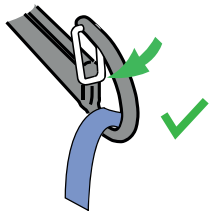

Place attachment loop on the hook.

Make sure the safety latches are closed and the sling strap is completely inside the hook.

4

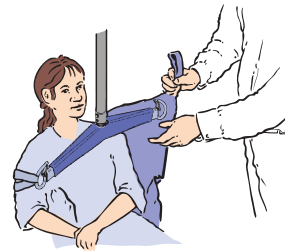

Connect the sling loops to the spreader bar. Attach shoulder straps then leg straps.

Raise the patient, proceed with the transfer.

Lower onto new location. When body weight is fully supported detach loops.

Transfer from supine position

1



Roll the patient onto their side. Fold the sling in half and place it on the bed along the back of the patient.

For sling with head support extend to top of patient's head.

2

Roll the patient back onto the sling and then roll the patient in the opposite direction, so that the folded part of the sling can be straightened out.


Approach the patient with the lift.

Place the spreader bar close enough to be able to attach the shoulder straps.

3



Loop sling

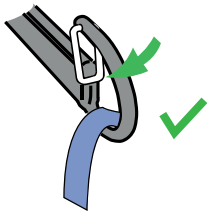

Place attachment loop on the hook.

Make sure the safety latches are closed and the sling strap is completely inside the hook.

4


Attach the sling loops to the spreader bar. Attach shoulder straps then leg straps.

Raise the patient, proceed with the transfer.

Lower onto new location. When body weight is fully supported detach loops.

Lift from seated position - Bariatric sling application

1

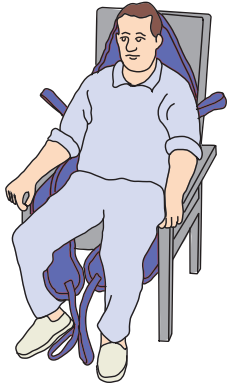

Place the sling around the patient, with the base of the sling slightly below the tail bone.


For sling with head support extend to top of patient's head.

Pull each leg strap under the thigh so that it emerges on the inside of the thigh.

2




Loop sling

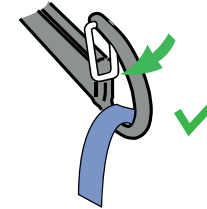

Place attachment loop on the hook.

Make sure the safety latches are closed and the sling strap is completely inside the hook.

3

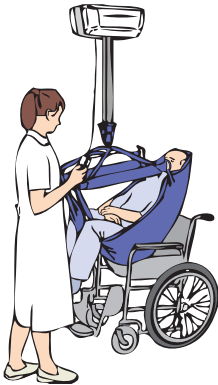

Connect the sling loops to the spreader bar.

Raise the patient in a semi-reclined position for the transfer.

Proceed with the transfer.

4



Lower onto new location. When body weight is fully supported detach loops.

Transfer from supine position - Bariatric sling application

1



Roll the patient onto their side. Fold the sling in half and place it on the bed along the back of the patient.

For sling with head support extend to top of patient's head.

2



Roll the patient back onto the sling and then roll the patient in the opposite direction, so that the folded part of the sling can be straightened out.


Approach the patient with the lift.

Place the spreader bar close enough to be able to attach the shoulder straps.

3



Loop sling

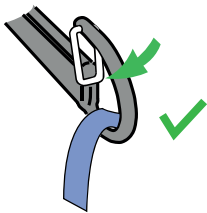

Place attachment loop on the hook.

Make sure the safety latches are closed and the sling strap is completely inside the hook.

4

Attach the sling loops to the spreader bar.

The straps must be brought under the thighs. This may involve lifting one leg at a time, and may mean lowering the spreader bar a little more.

Raise the patient in a semi-reclined position for the transfer.

Lower onto new location. When body weight is fully supported detach loops.